



TABLE OF CONTENTS

5TH GEN 4RUNNER	
INTERIOR CARGO BASKET.....	2

4TH GEN 4RUNNER	
INTERIOR CARGO BASKET.....	9

3RD GEN 4RUNNER	
INTERIOR CARGO BASKET.....	16

GX 470	
INTERIOR CARGO BASKET.....	23


100 SERIES LAND CRUISER	
INTERIOR CARGO BASKET.....	30



VICTORY 4X4

5TH GEN 4RUNNER INTERIOR CARGO BASKET

INSTALL INSTRUCTIONS

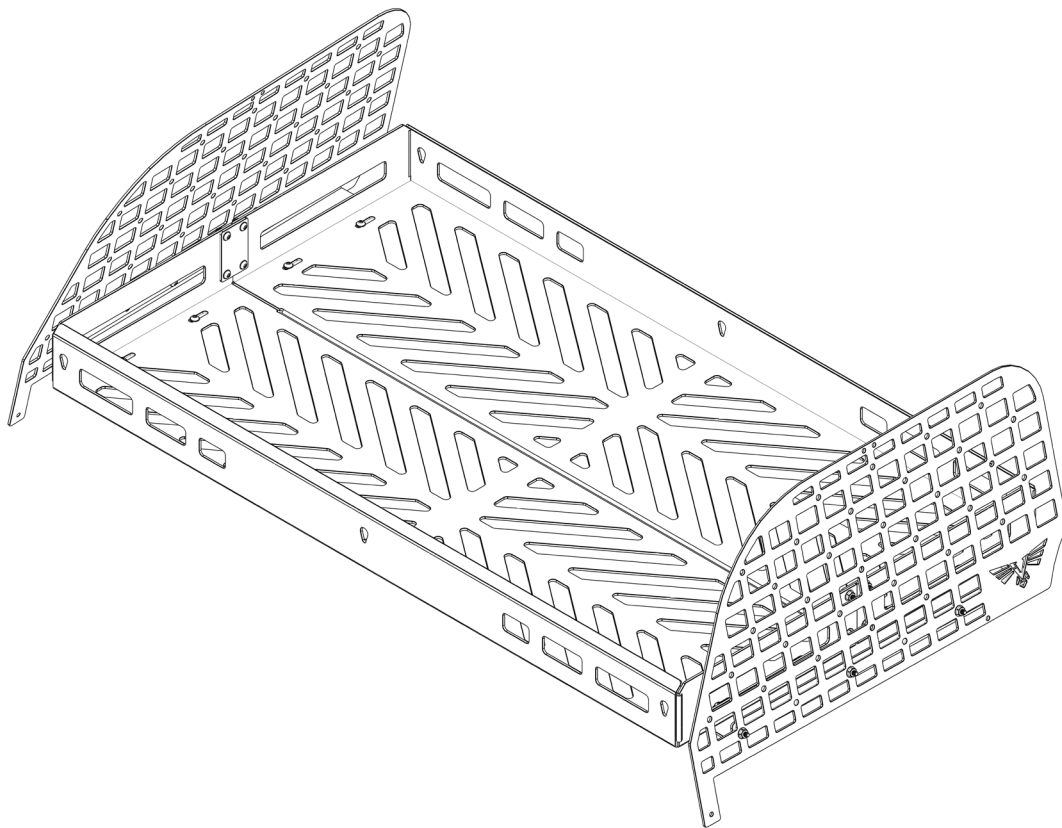


Please read the mounting instructions below carefully before attempting to install.

Be sure to check out the install video on the product page, if available.

Thank you for purchasing from Victory 4x4! Checkout our website, victory4x4.com for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-459-8447!


INCLUDED HARDWARE

25x

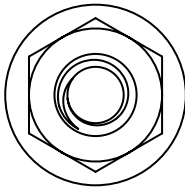


1/4"-20
Serr. Flange Nut

25x



1/4"-20 X 3/4"
Button Head


25x

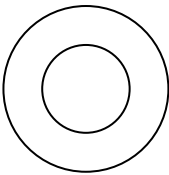


1/4" ID
Washer

INCLUDED PARTS


2x

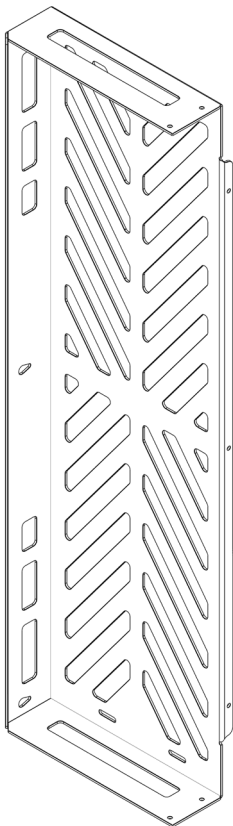

2x

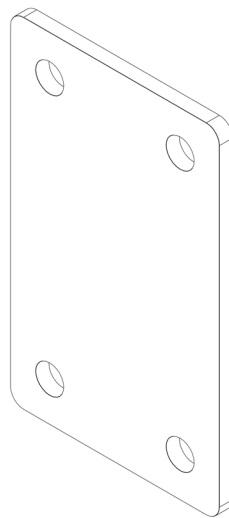


2x

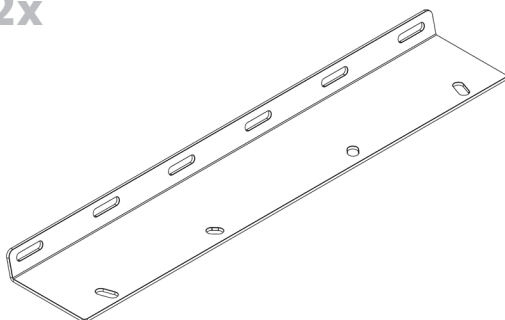


INSTALLATION

- 1** Start by installing the mounts onto the Rear Window MOLLE Panels. Do this using three 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts per mount. The first hole in the mount should be lined up on the first row with the hole closest to the hatch of the vehicle. Either mount can be used on either side.

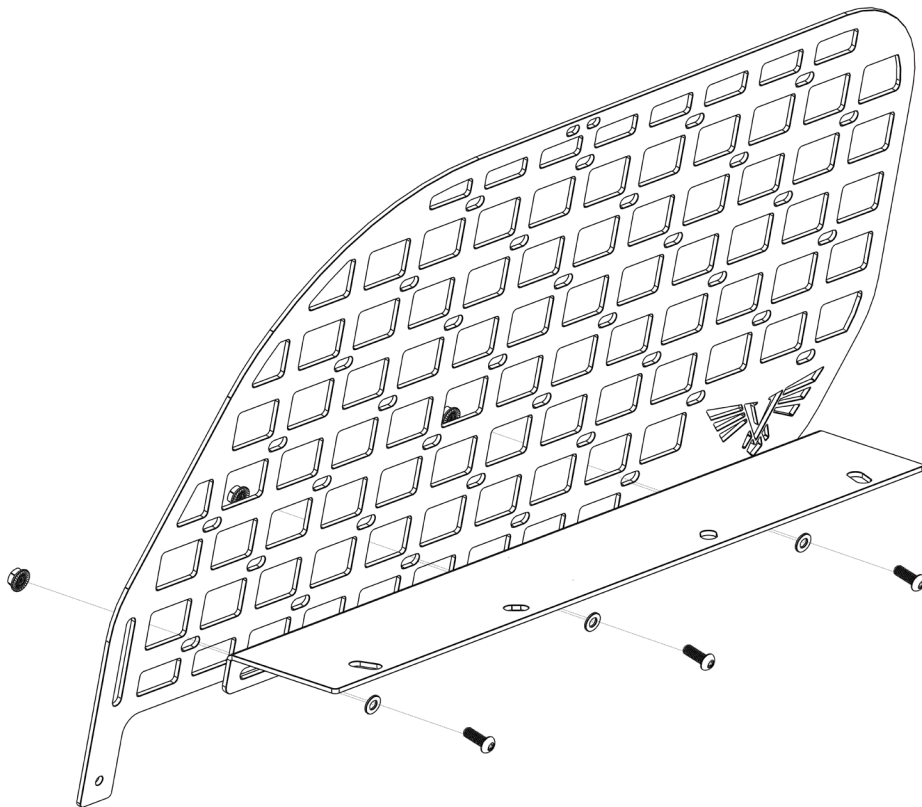


INSTALLATION

- 2** Next, assemble the basket. Start by using three 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts to loosely attach the bottom flange of each half of the basket to each other.

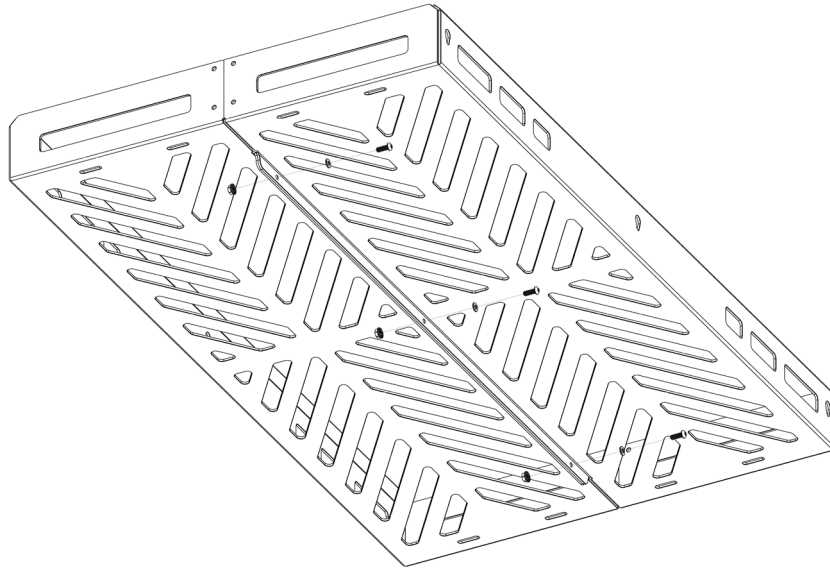


- 3** Next, use the small rectangular brackets along with four 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts per side to secure the sides of the basket loosely together. Once everything is in place, go back and fully tighten all of the bolts on the basket.

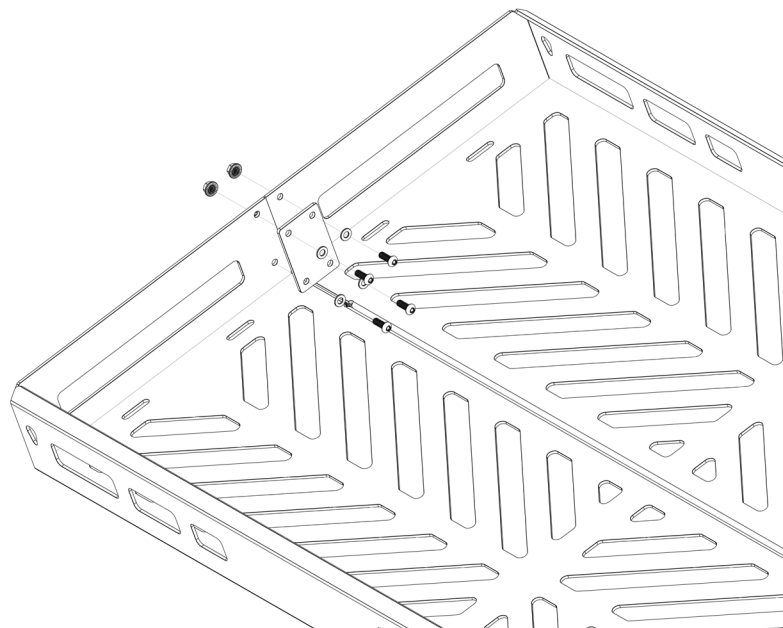


INSTALLATION

- 4** Next, cut the provided trim into 3" strips. Then, using something that will not damage the powder coat on the basket, pry the corners apart just enough to put the trim on edge of the side panel. Do this at each corner.

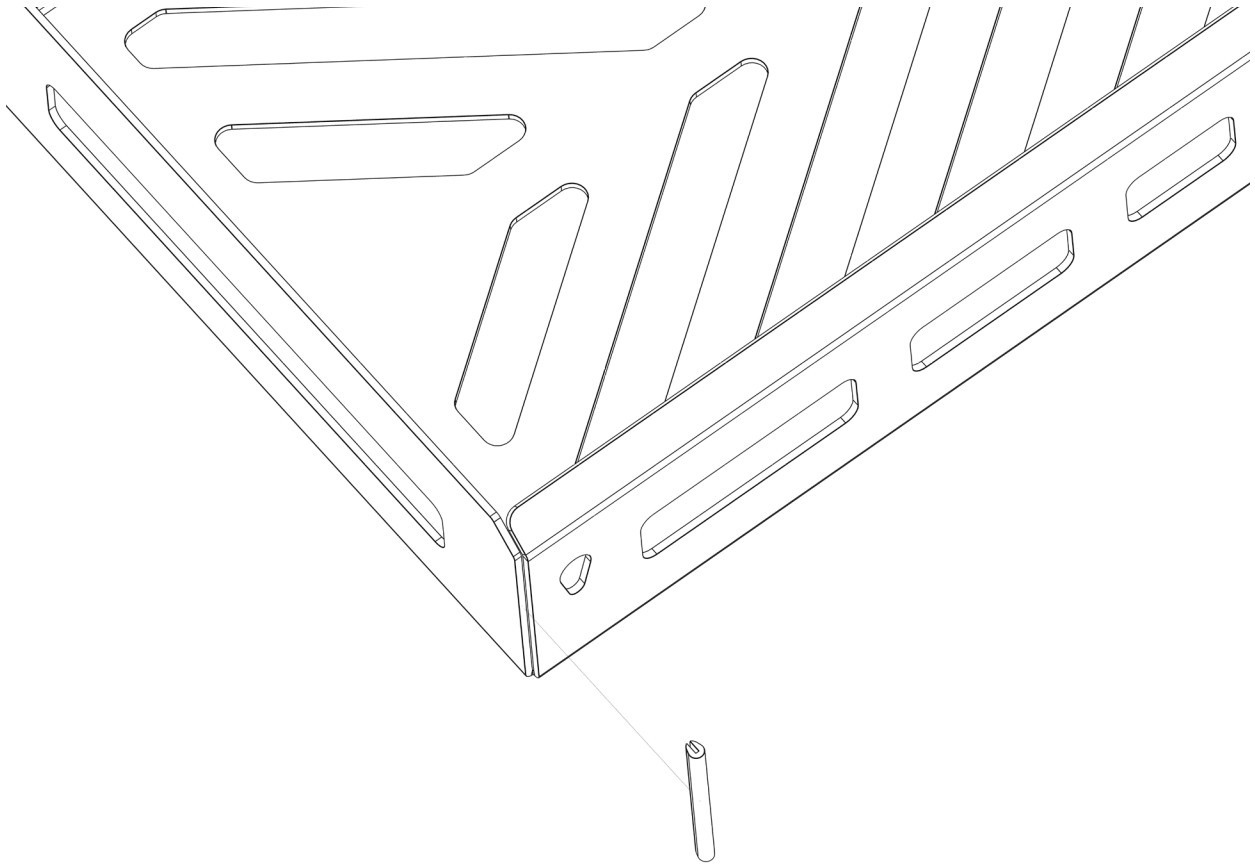

INSTALLATION

- 5** With the basket fully assembled, place it on top of the mounts and loosely bolt it in using four 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts per side. Once it is loosely installed, adjust the position of the basket until it is where you want it, then finish tightening it fully into place.

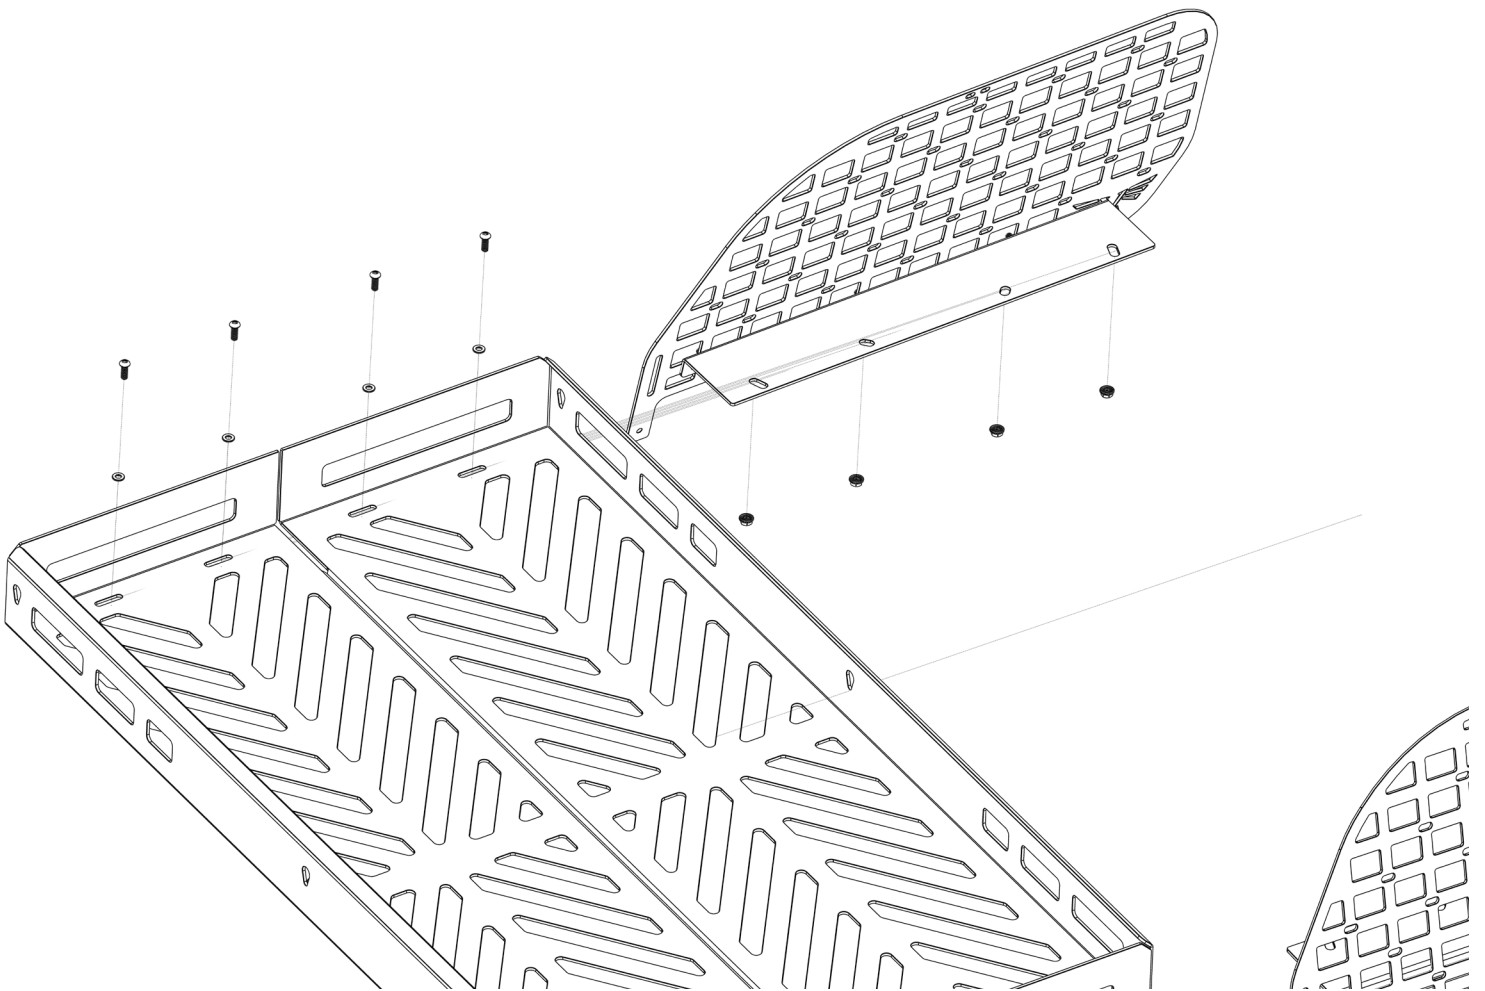




VICTORY 4X4

4TH GEN 4RUNNER INTERIOR CARGO BASKET

INSTALL INSTRUCTIONS

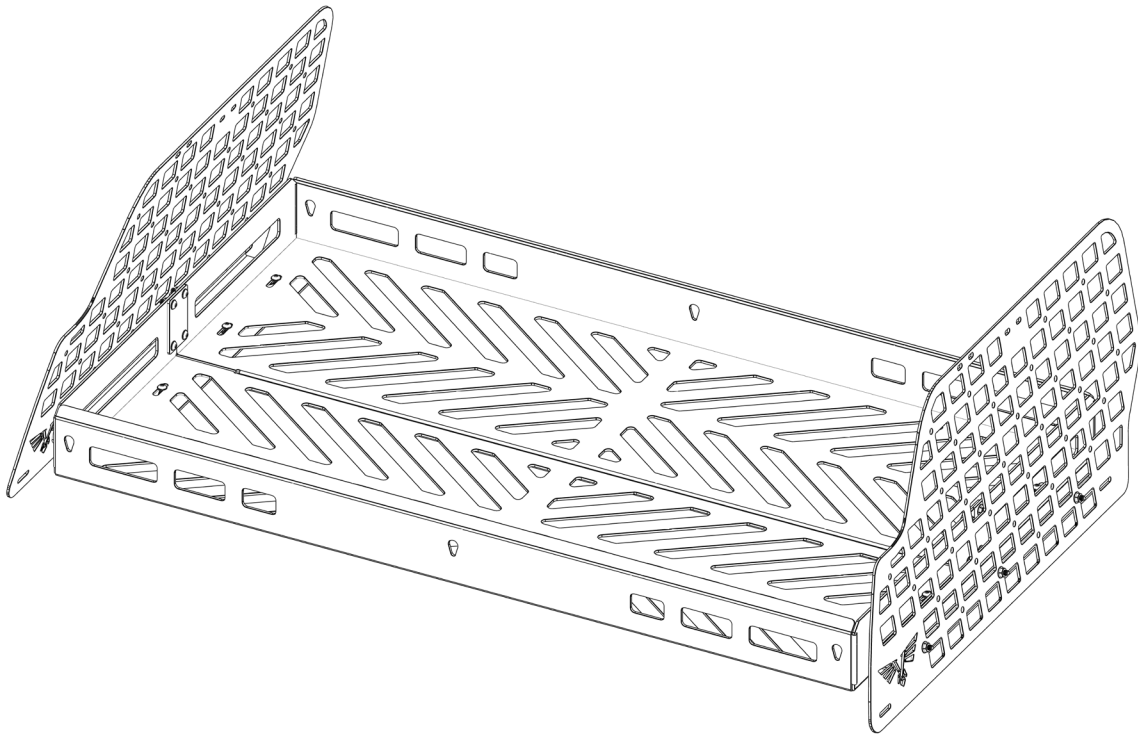


Please read the mounting instructions below carefully before attempting to install.

Be sure to check out the install video on the product page, if available.

Thank you for purchasing from Victory 4x4! Checkout our website, victory4x4.com for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-459-8447!


INCLUDED HARDWARE

25x

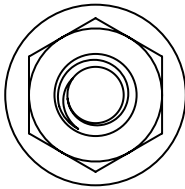


1/4"-20
Serr. Flange Nut

25x



1/4"-20 X 3/4"
Button Head


25x

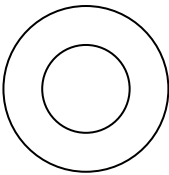


1/4" ID
Washer

INCLUDED PARTS


2x

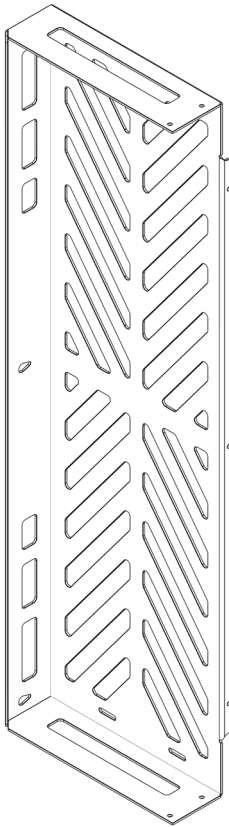

2x

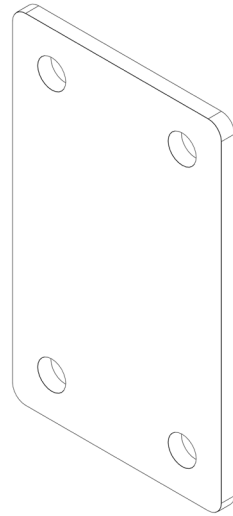


2x

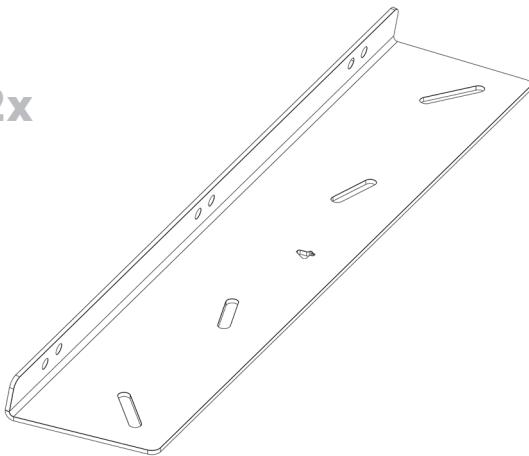


INSTALLATION

- 2** Next, assemble the basket. Start by using three 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts to attach the bottom flange of each half of the basket to each other.

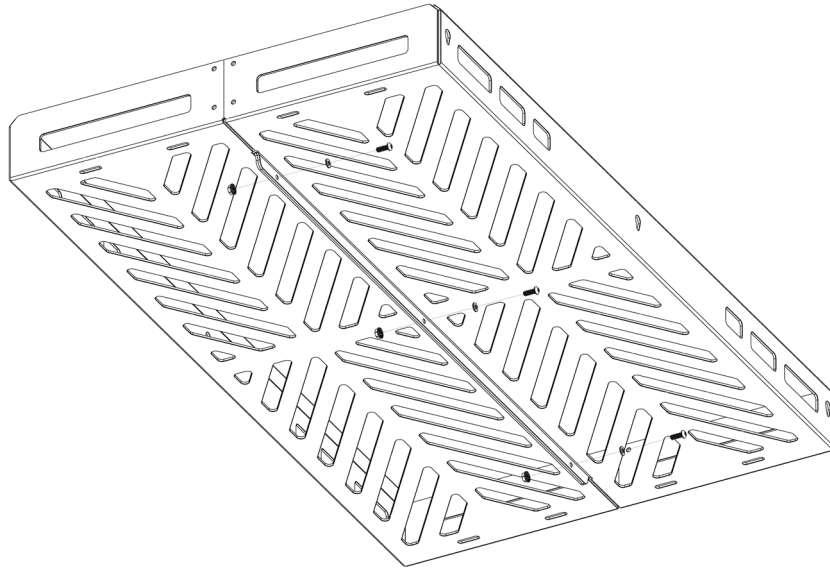


- 3** Next, use the small rectangular brackets along with four 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts per side to secure the sides of the basket together.

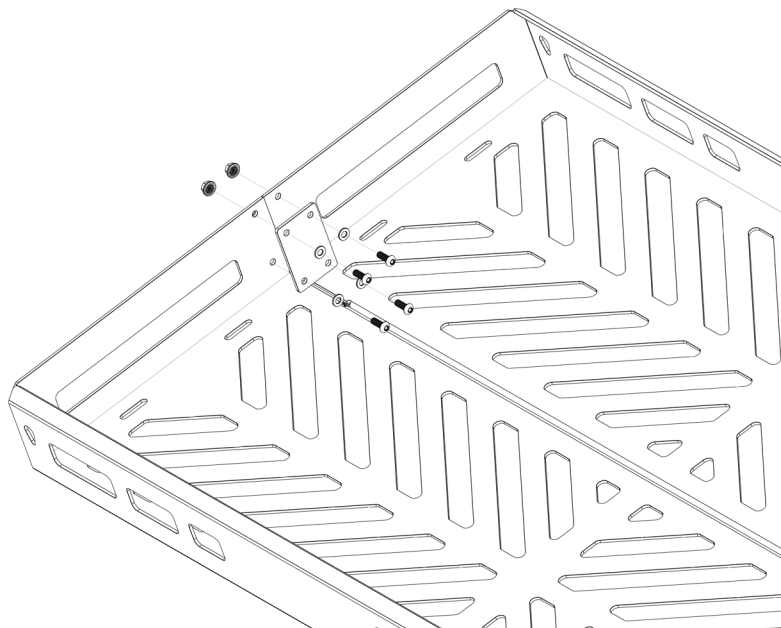


INSTALLATION

- 4** Next, cut the provided trim into 3" strips. Then, using something that will not damage the powder coat on the basket, pry the corners apart just enough to put the trim on edge of the side panel. Do this at each corner.

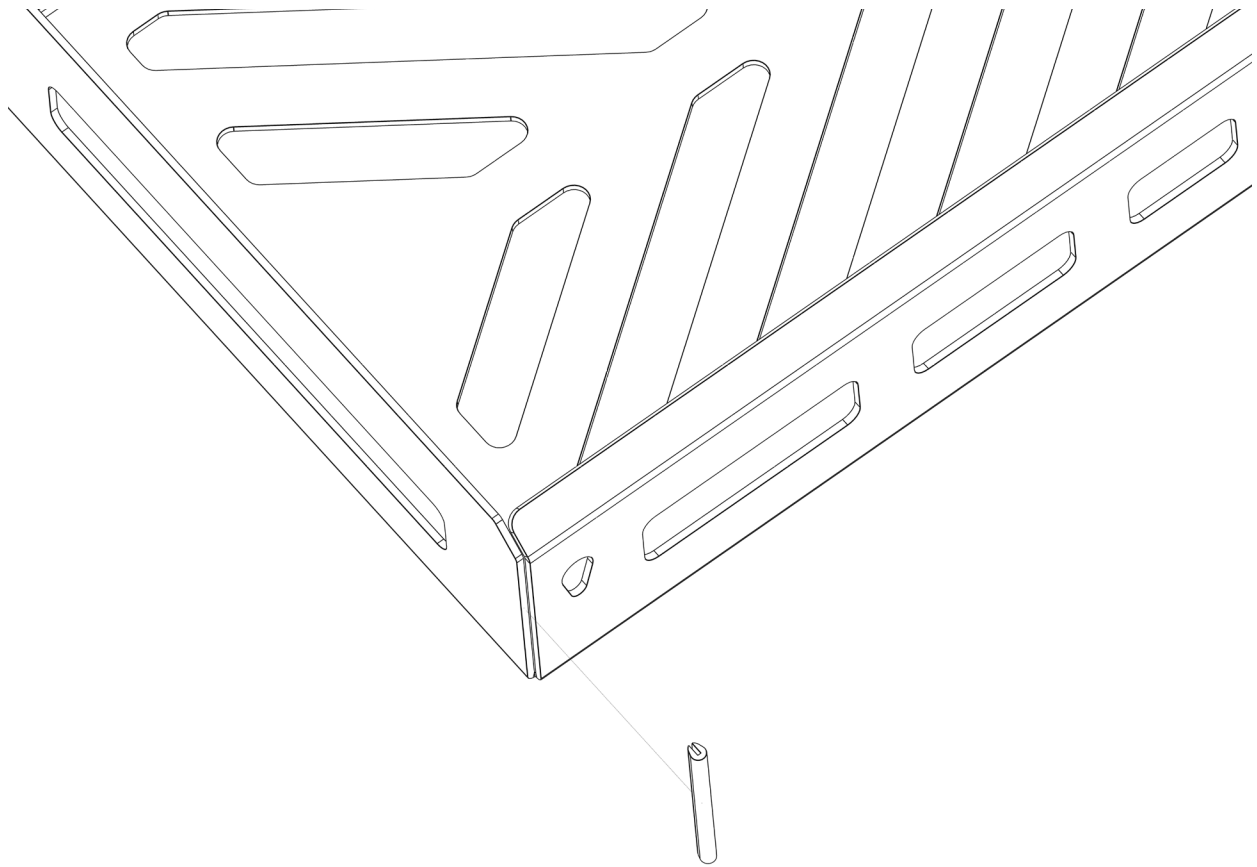

INSTALLATION

- 5** With the basket fully assembled, place it on top of the mounts and loosely bolt it in using four 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts per side. Once it is loosely installed, adjust the position of the basket until it is where you want it, then finish tightening it fully into place.

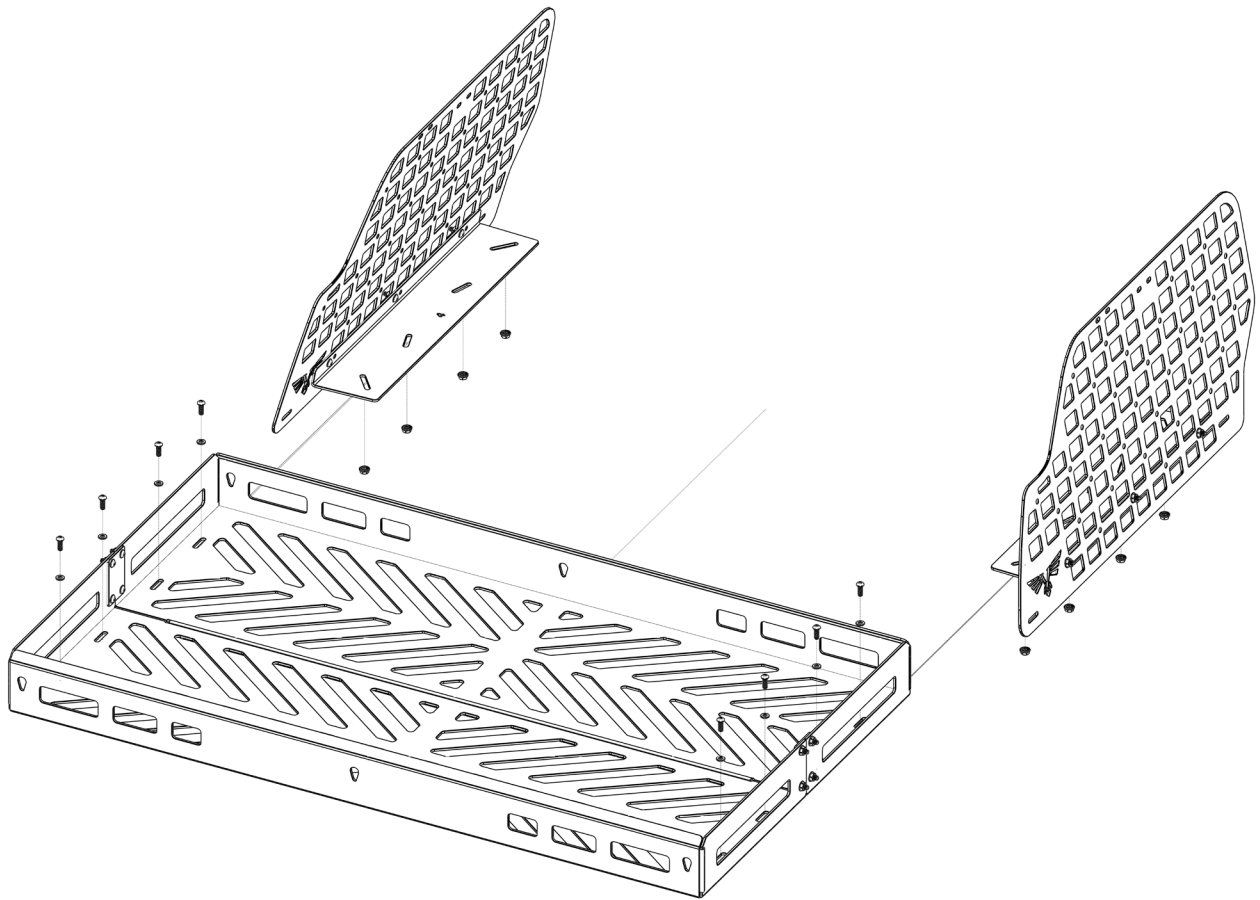




VICTORY 4X4

3RD GEN 4RUNNER INTERIOR CARGO BASKET

INSTALL INSTRUCTIONS

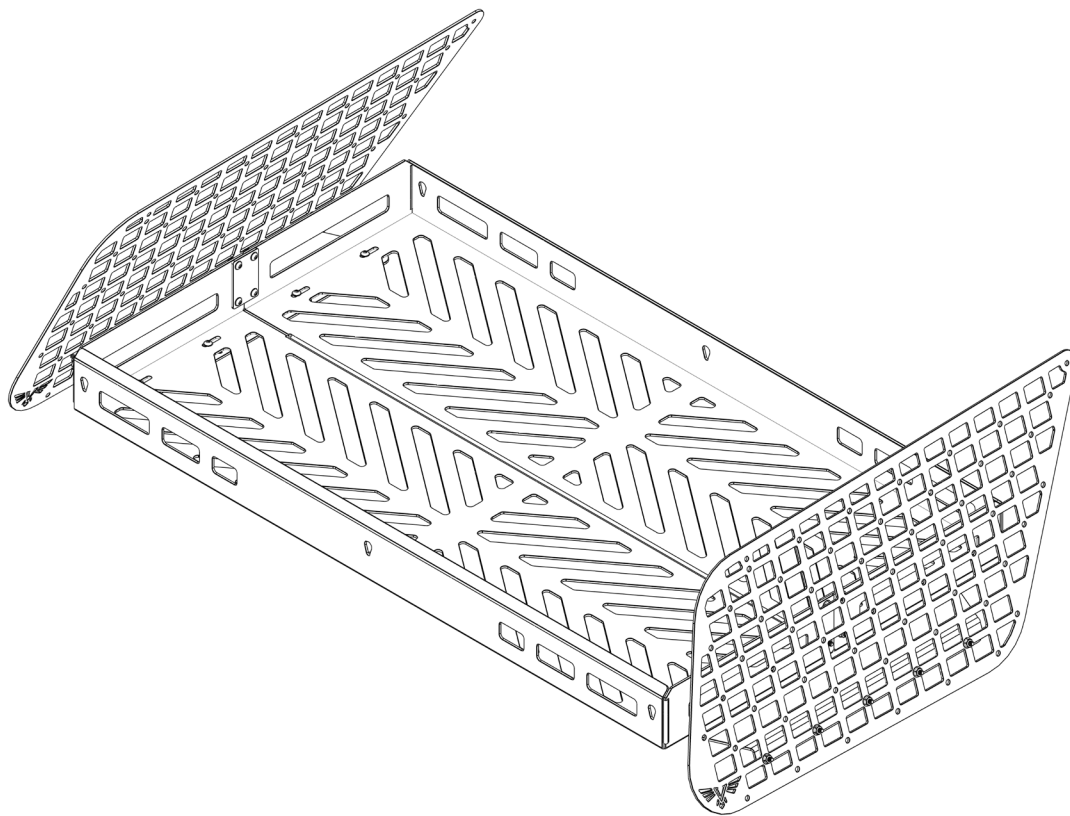


Please read the mounting instructions below carefully before attempting to install.

Be sure to check out the install video on the product page, if available.

Thank you for purchasing from Victory 4x4! Checkout our website, victory4x4.com for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-459-8447!


INCLUDED HARDWARE

29x

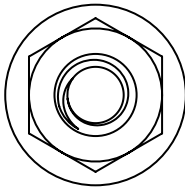


1/4"-20
Serr. Flange Nut

29x



1/4"-20 X 3/4"
Button Head


29x

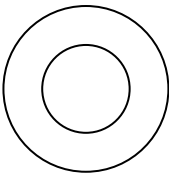


1/4" ID
Washer

INCLUDED PARTS


2x

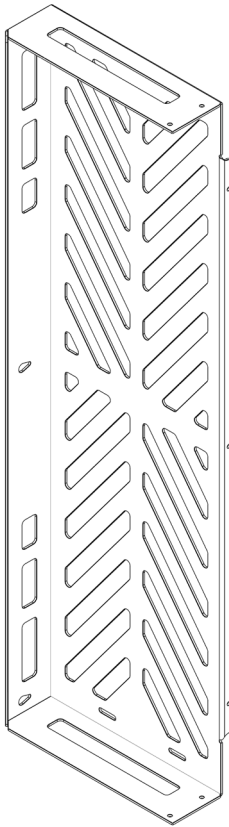

2x

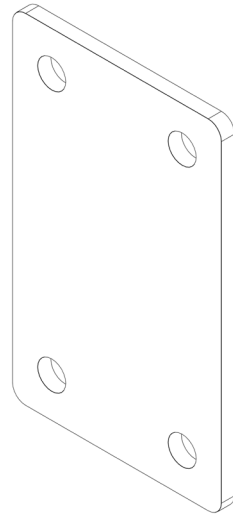


2x

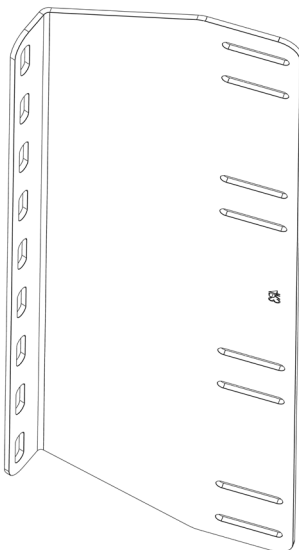


INSTALLATION

- 1** Start by loosely installing the mounts onto the Rear Window MOLLE Panels. Do this using five 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts per mount. They can be mounted to either the first or second row of holes. Either mount can be used on either side.

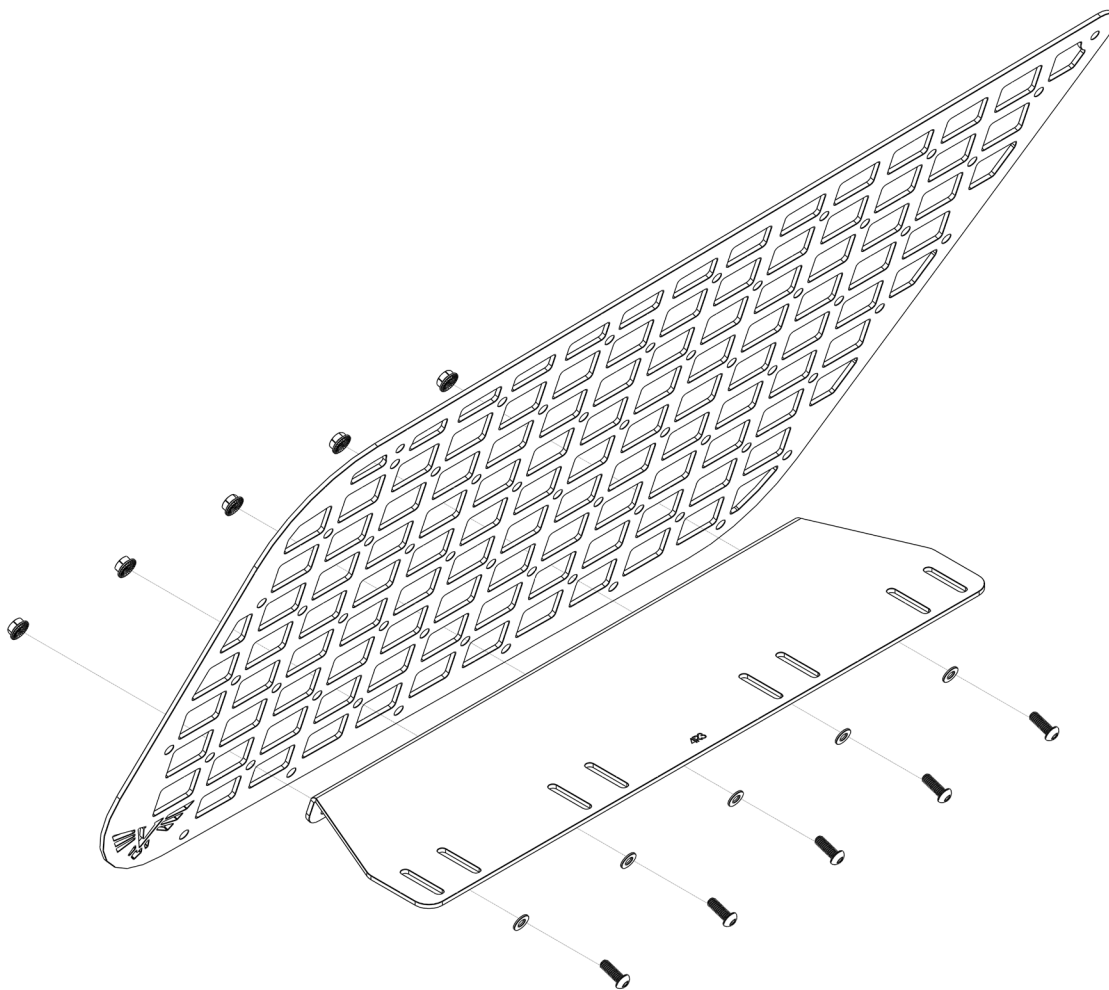


INSTALLATION

- 2** Next, assemble the basket. Start by using three 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts to loosely attach the bottom flange of each half of the basket to each other.

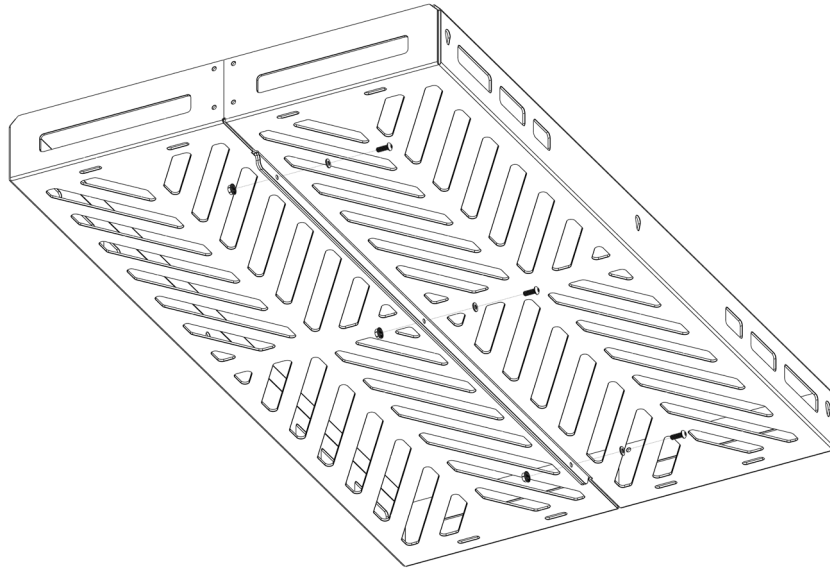


- 3** Next, use the small rectangular brackets along with four 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts per side to secure the sides of the basket loosely together. Once everything is in place, go back and fully tighten all of the bolts on the basket.

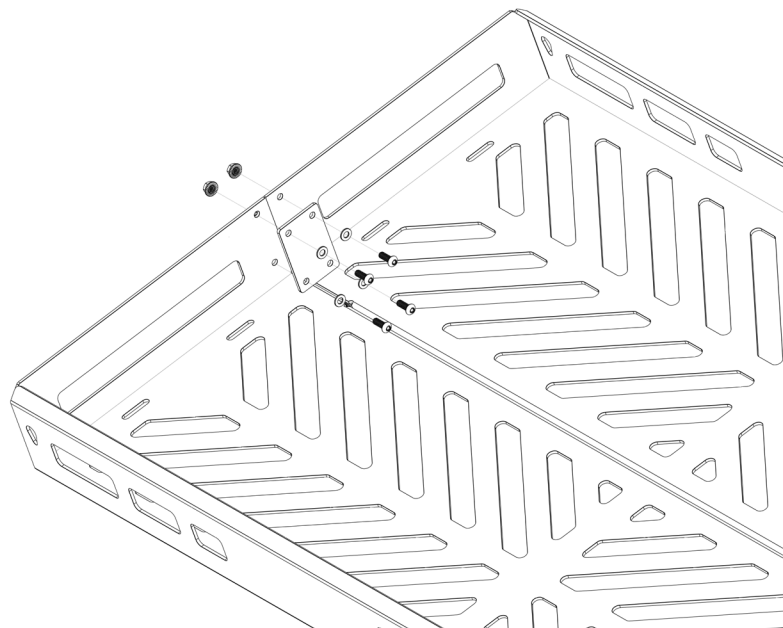


INSTALLATION

- 4** Next, cut the provided trim into 3" strips. Then, using something that will not damage the powder coat on the basket, pry the corners apart just enough to put the trim on edge of the side panel. Do this at each corner.

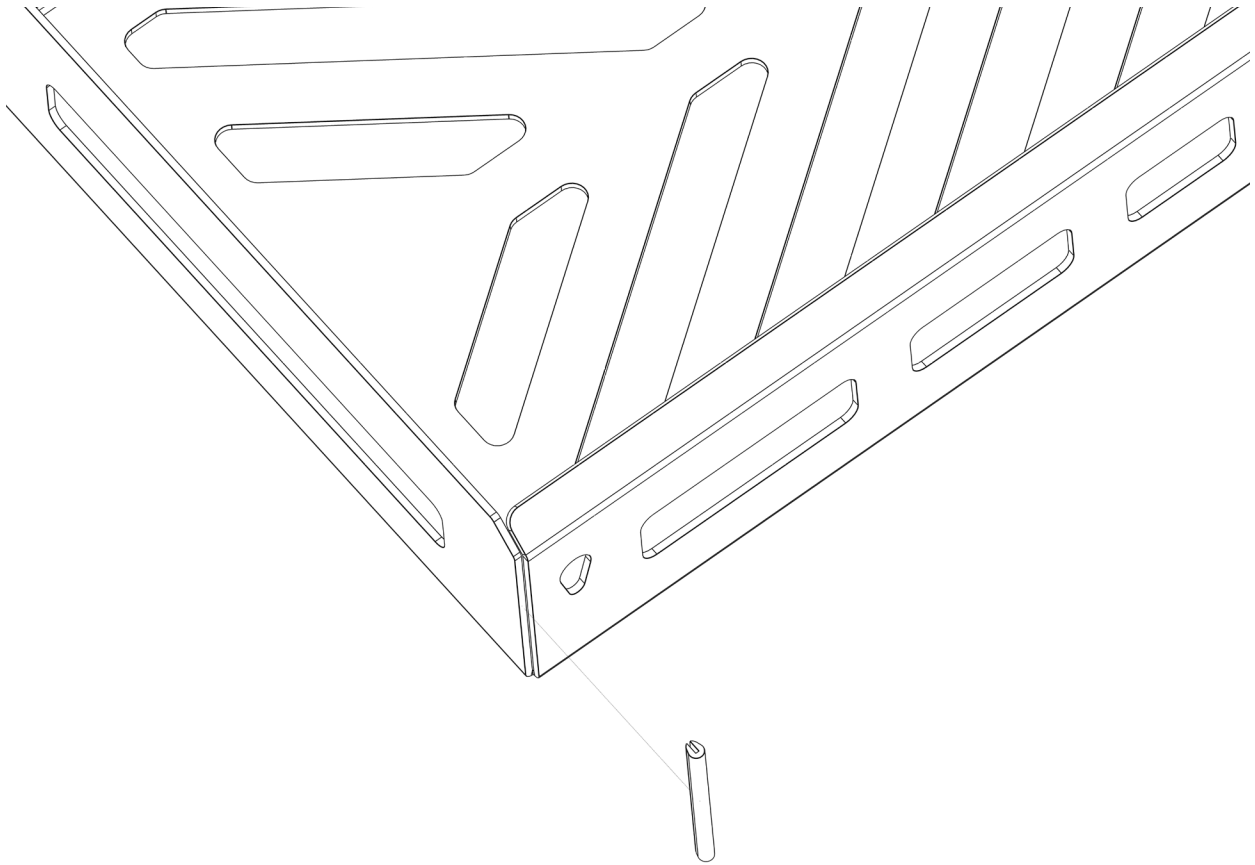

INSTALLATION

- 5** With the basket fully assembled, place it on top of the mounts and loosely bolt it in using four 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts per side. Which set of slots you use will depend on where the mounts were placed and what works best for you. Once it is loosely installed, adjust the position of the basket until it is where you want it, then finish tightening everything fully into place.

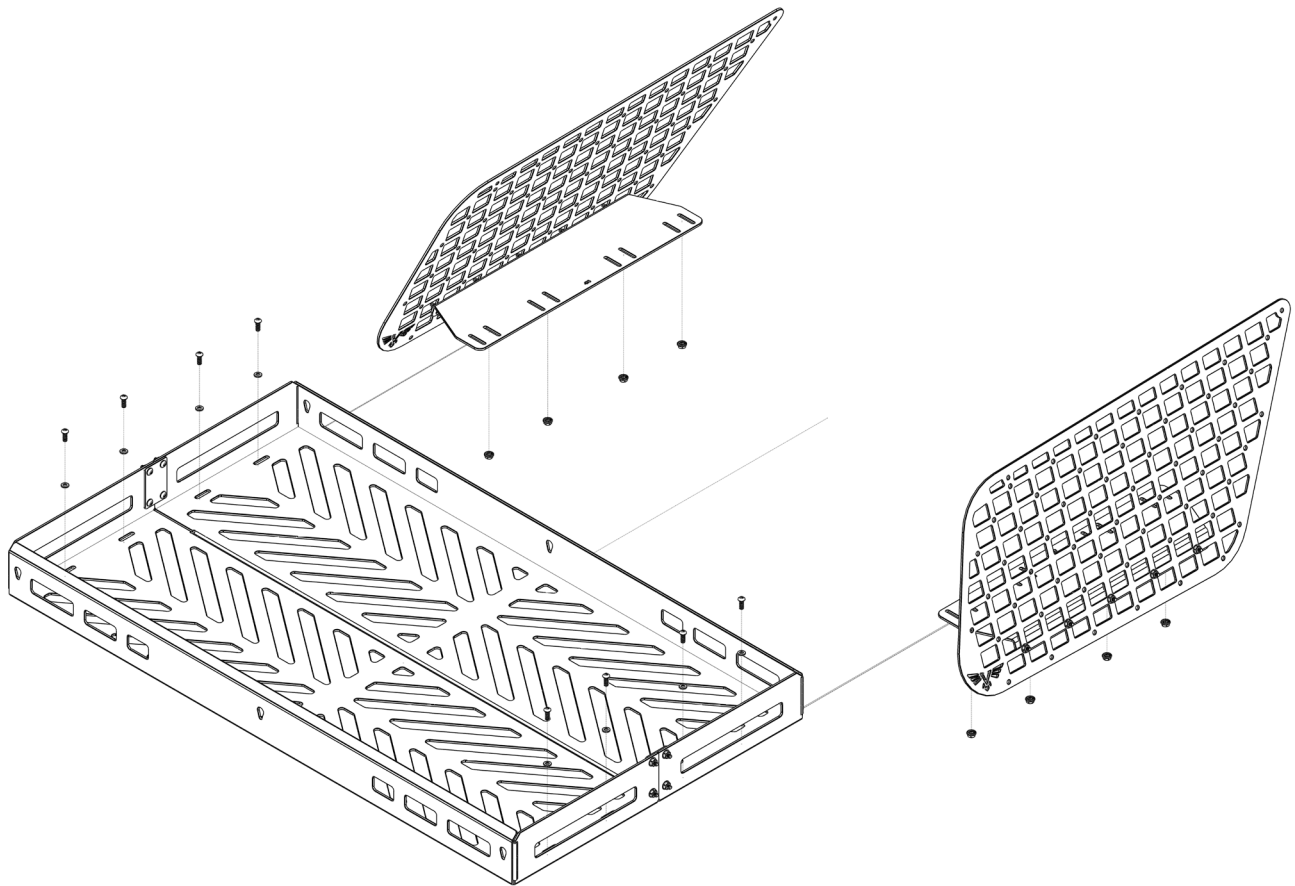




VICTORY 4X4

GX 470

INTERIOR CARGO BASKET

INSTALL INSTRUCTIONS

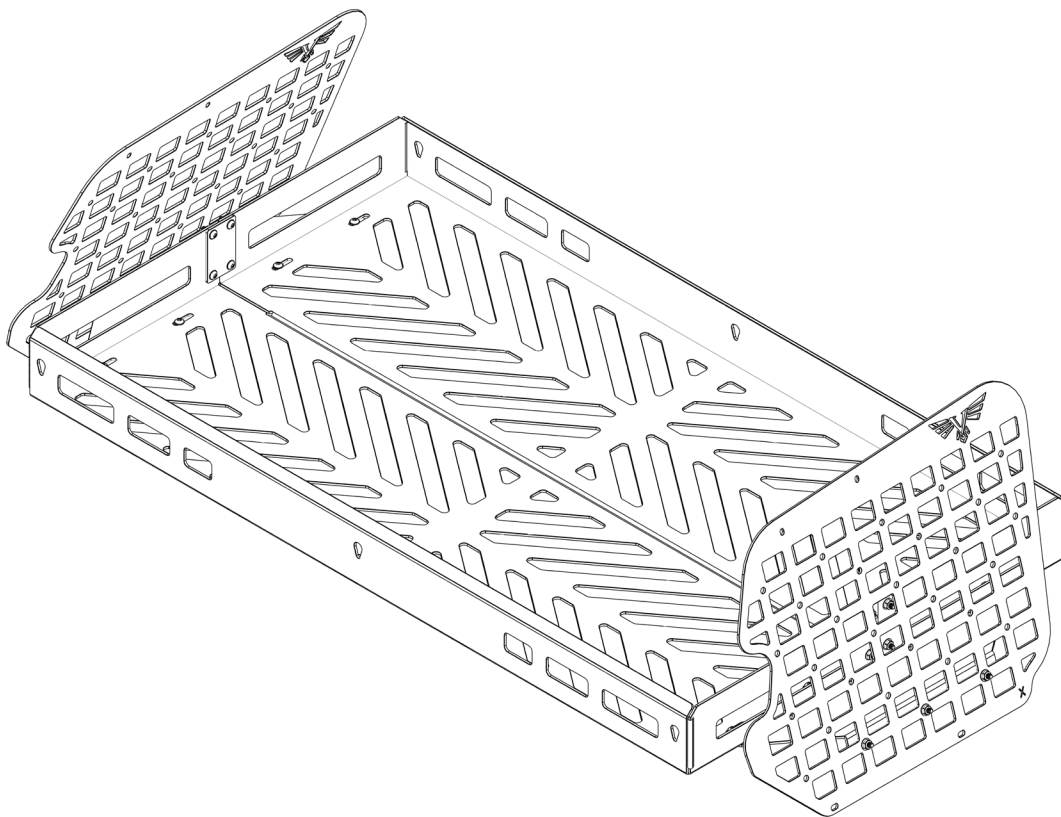


Please read the mounting instructions below carefully before attempting to install.

Be sure to check out the install video on the product page, if available.

Thank you for purchasing from Victory 4x4! Checkout our website, victory4x4.com for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-459-8447!


INCLUDED HARDWARE

25x

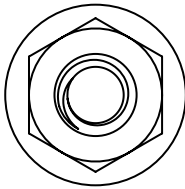


1/4"-20
Serr. Flange Nut

25x



1/4"-20 X 3/4"
Button Head


25x

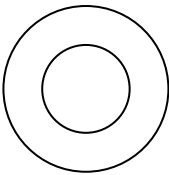


1/4" ID
Washer

INCLUDED PARTS


2x

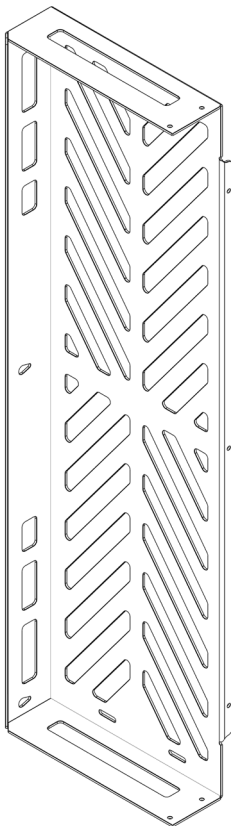

2x

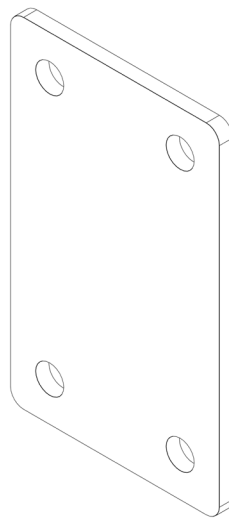


2x

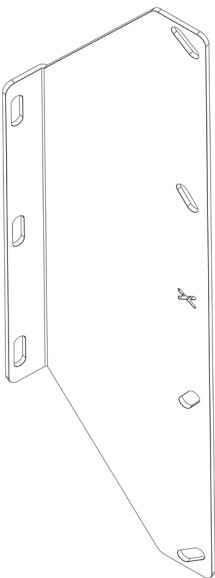


INSTALLATION

- 1** Start by loosely installing the mounts onto the Rear Window MOLLE Panels. Do this using three 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts per mount. They should be mounted on the first row of holes. Either mount can be used on either side.

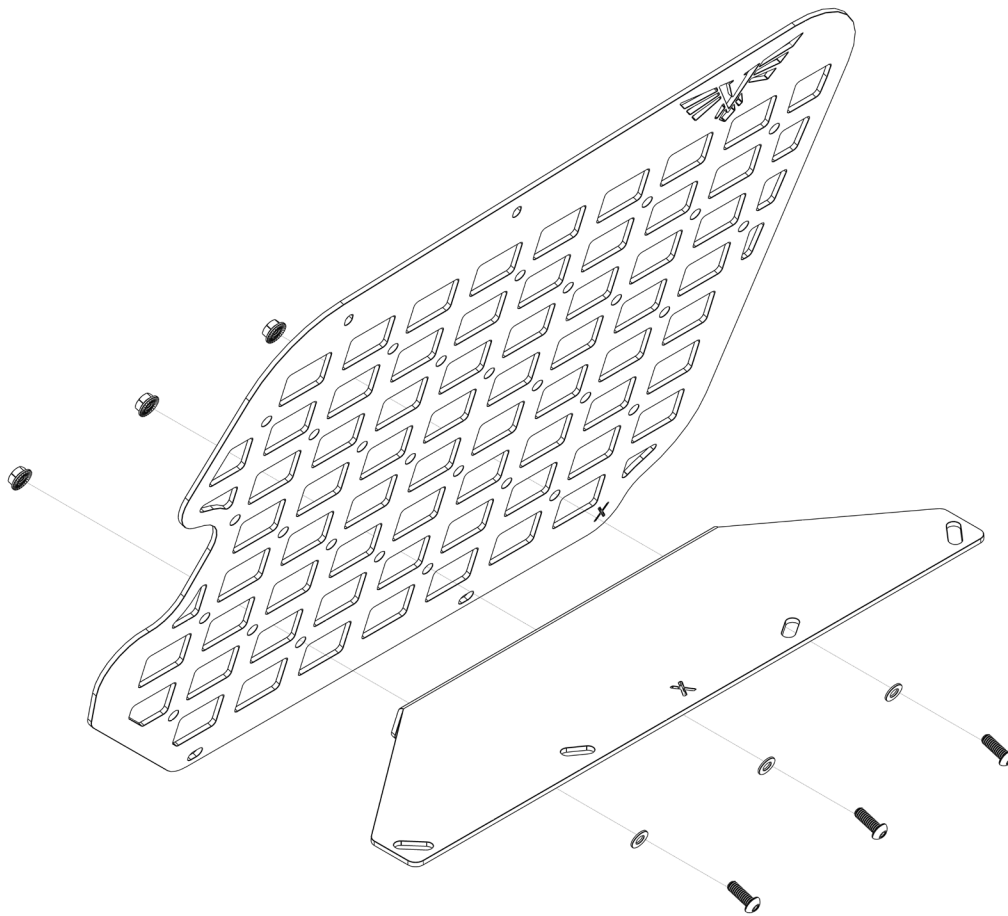


INSTALLATION

- 2** Next, assemble the basket. Start by using three 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts to loosely attach the bottom flange of each half of the basket to each other.

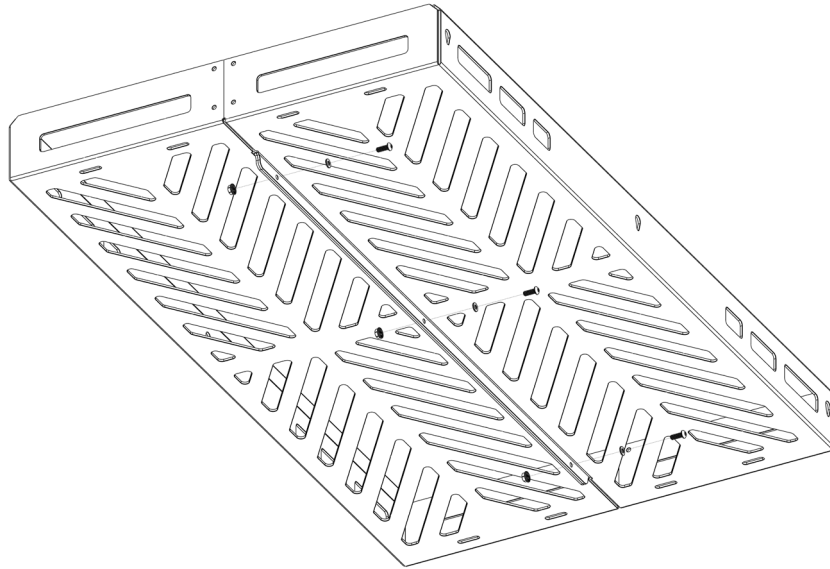


- 3** Next, use the small rectangular brackets along with four 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts per side to secure the sides of the basket loosely together. Once everything is in place, go back and fully tighten all of the bolts on the basket.

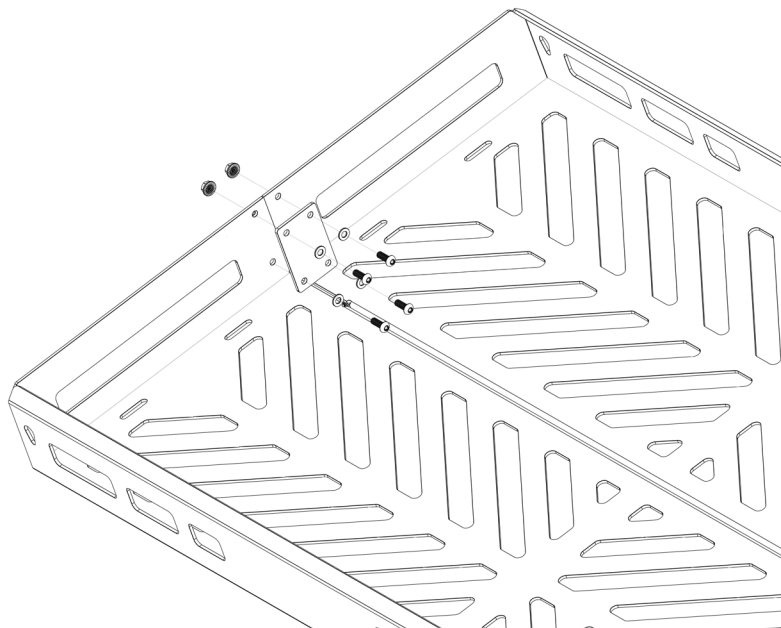


INSTALLATION

- 4** Next, cut the provided trim into 3" strips. Then, using something that will not damage the powder coat on the basket, pry the corners apart just enough to put the trim on edge of the side panel. Do this at each corner.

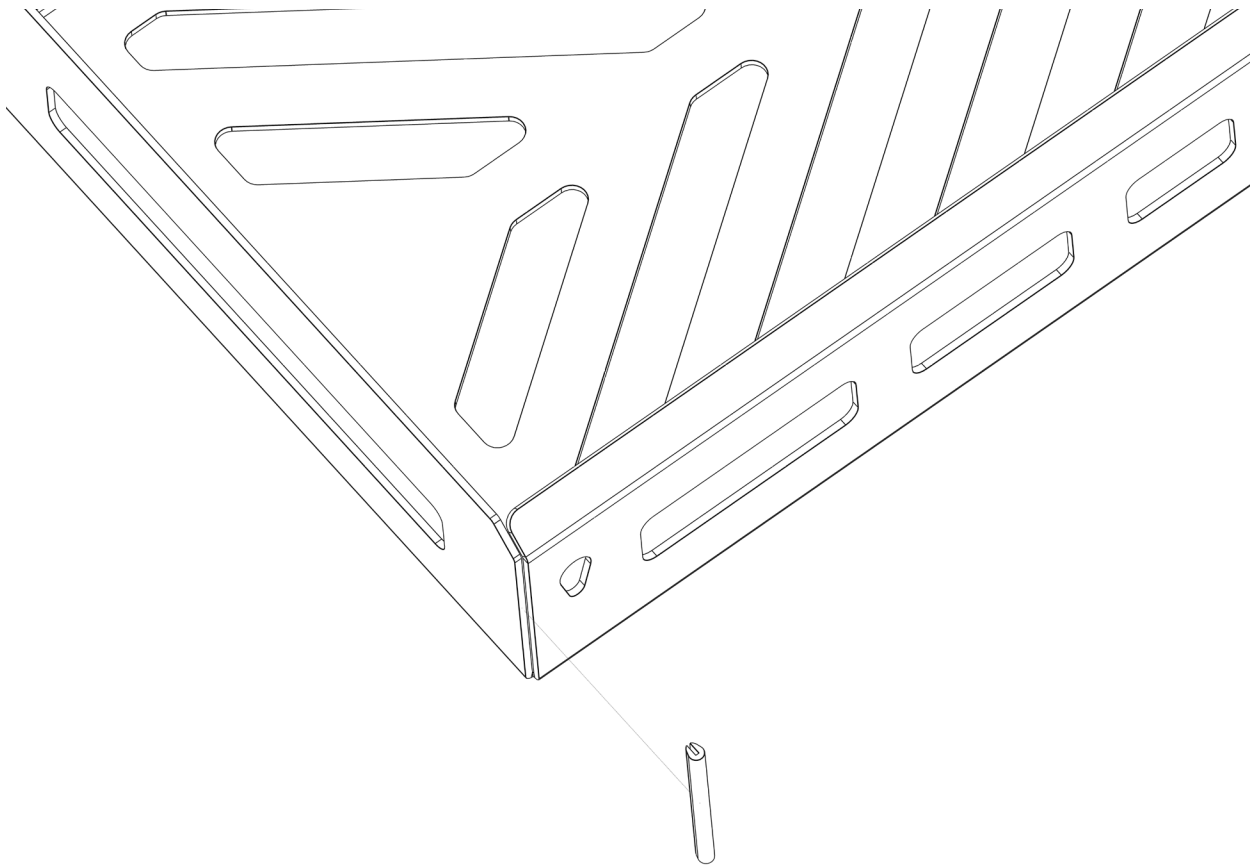

INSTALLATION


- 5** With the basket fully assembled, place it on top of the mounts and loosely bolt it in using four 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts per side. Once it is loosely installed, adjust the position of the basket until it is where you want it, then finish tightening everything fully into place.

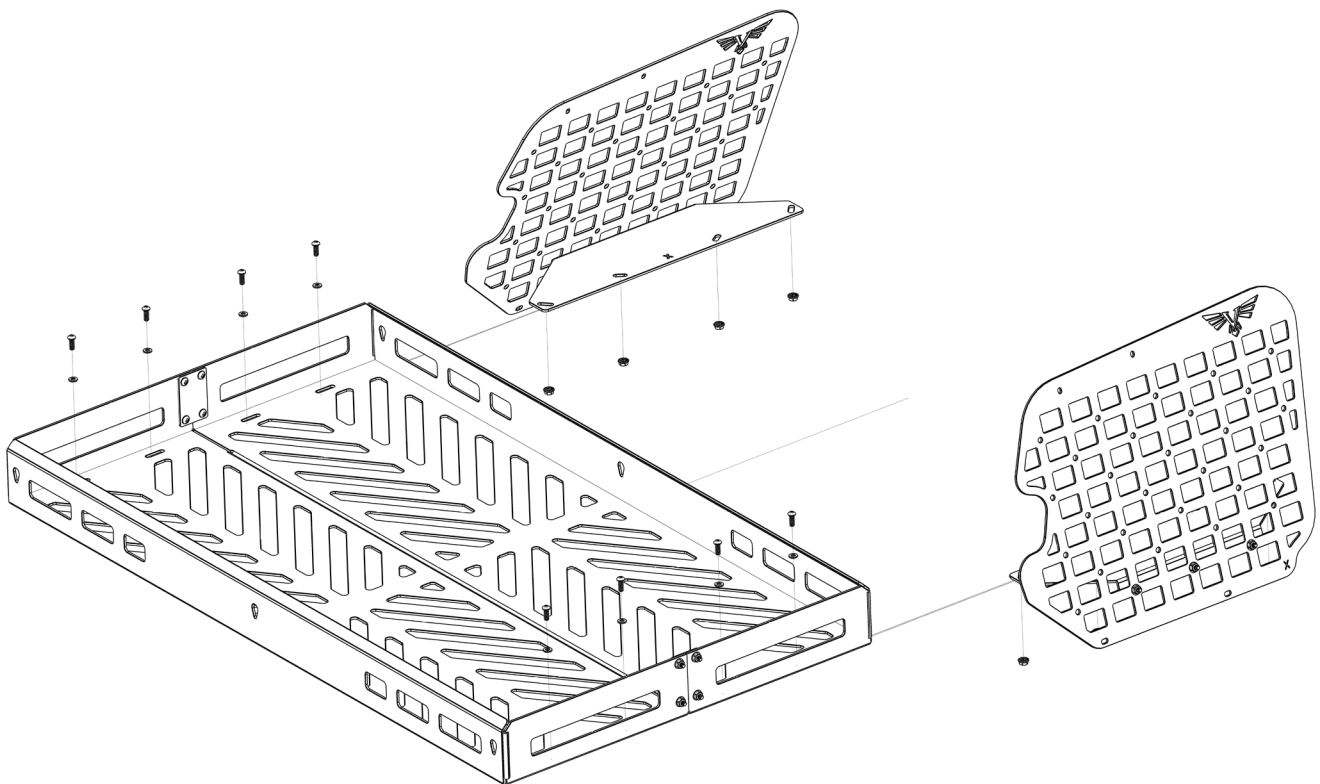



VICTORY 4X4

100 SERIES LAND CRUISER INTERIOR CARGO BASKET INSTALL INSTRUCTIONS

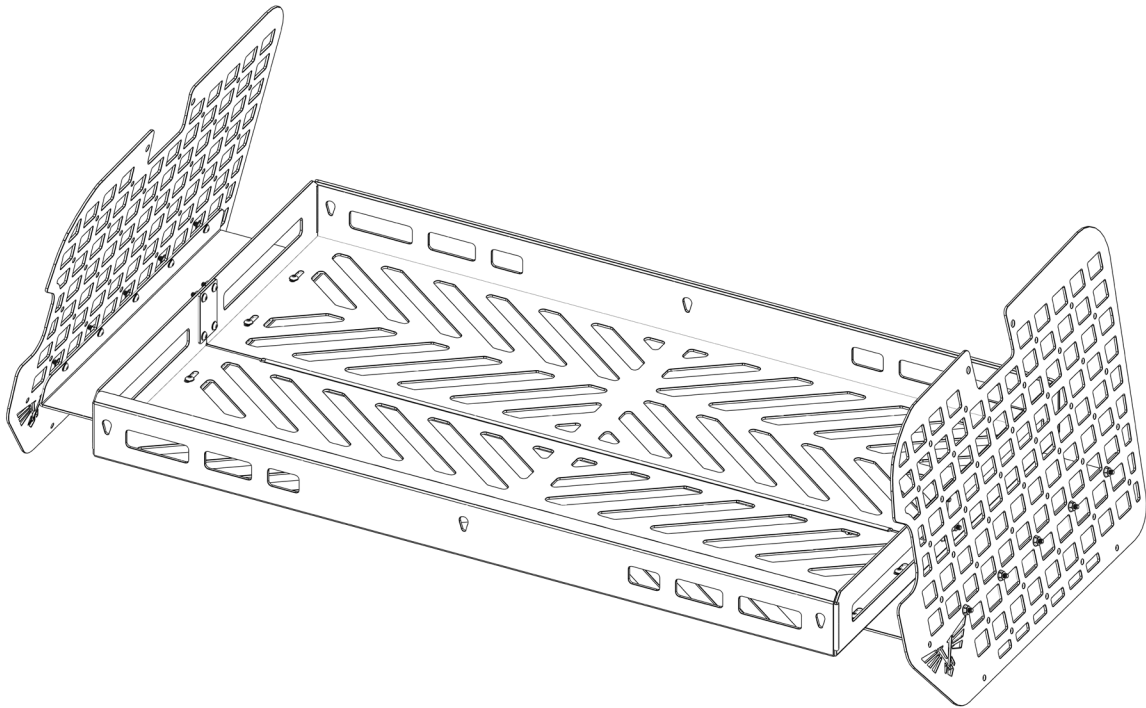


Please read the mounting instructions below carefully before attempting to install.

Be sure to check out the install video on the product page, if available.

Thank you for purchasing from Victory 4x4! Checkout our website, victory4x4.com for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-459-8447!


INCLUDED HARDWARE

29x

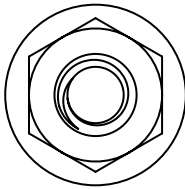


1/4"-20
Serr. Flange Nut

29x



1/4"-20 X 3/4"
Button Head


29x

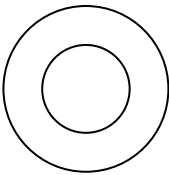


1/4" ID
Washer

INCLUDED PARTS


2x

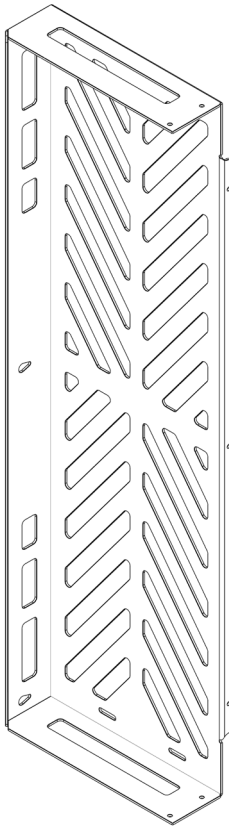

2x

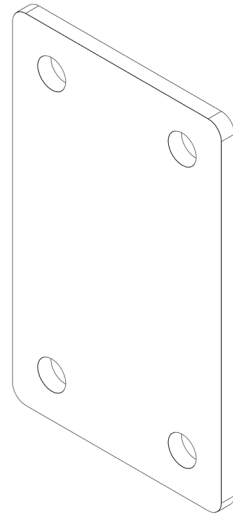


2x

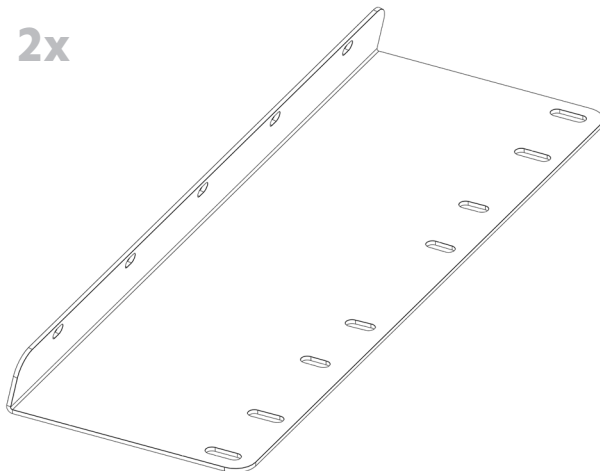


INSTALLATION

- 1** Start by loosely installing the mounts onto the Rear Window MOLLE Panels so that adjustments can be made later on. Do this using five 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts per mount. They should be mounted to the fourth row of holes and will use all holes on the row except for the one closest to the front of the vehicle. Either mount can be used on either side.

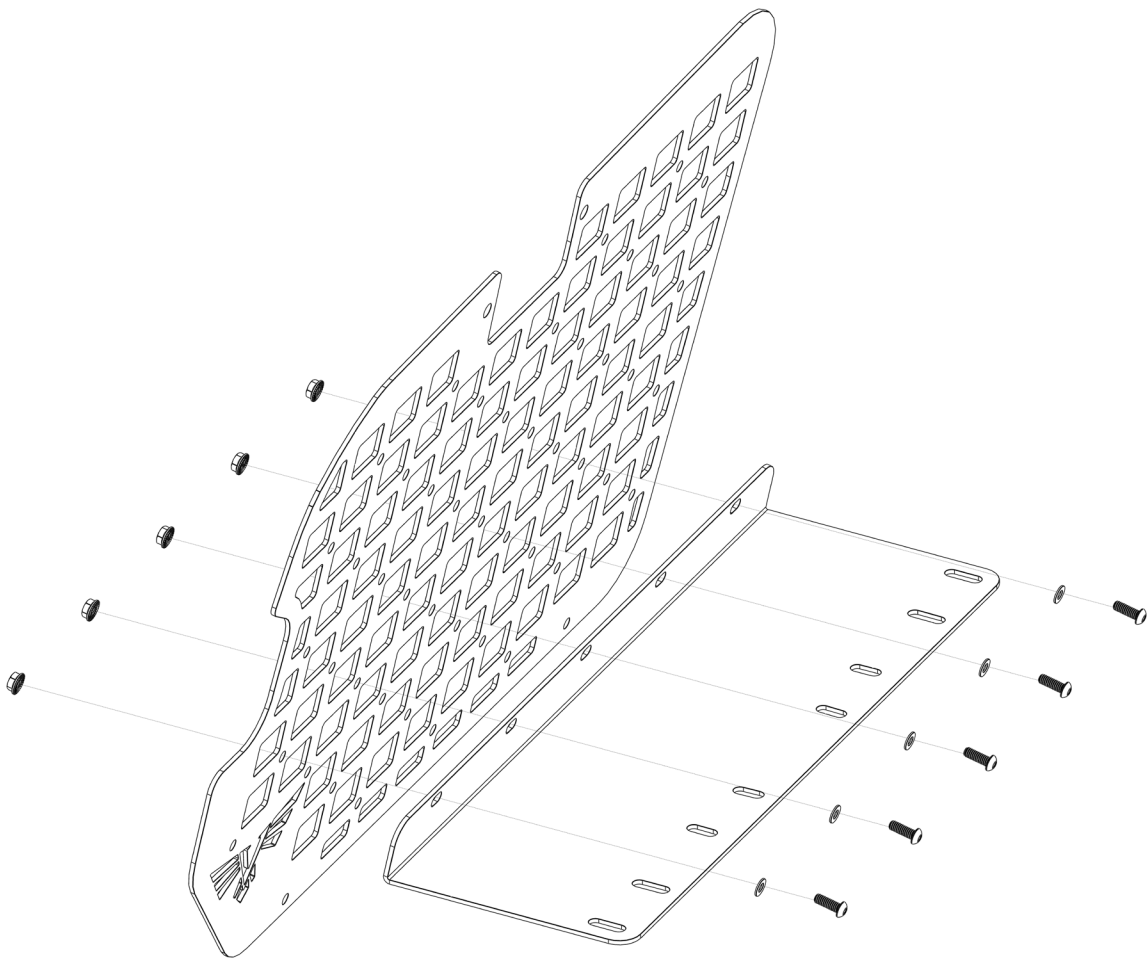


INSTALLATION

- 2** Next, assemble the basket. Start by using three 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts to loosely attach the bottom flange of each half of the basket to each other.

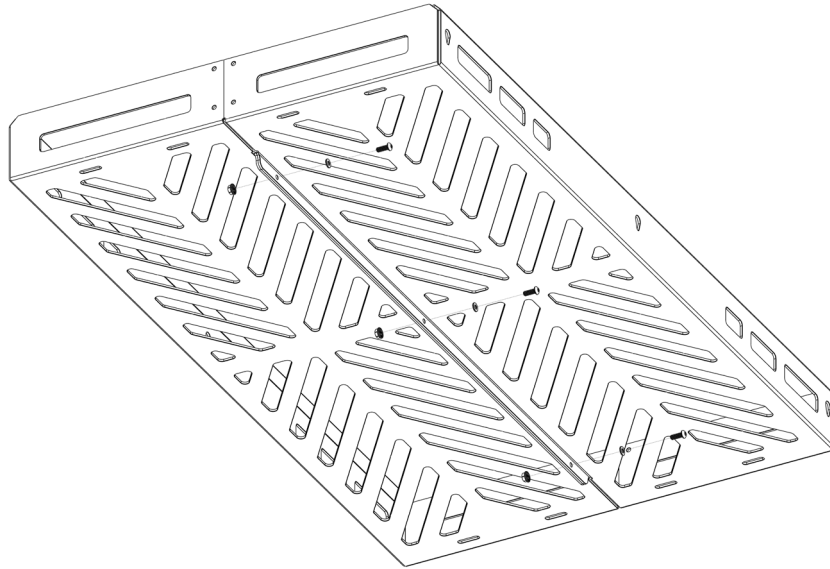


- 3** Next, use the small rectangular brackets along with four 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts per side to secure the sides of the basket loosely together. Once everything is in place, go back and fully tighten all of the bolts on the basket.

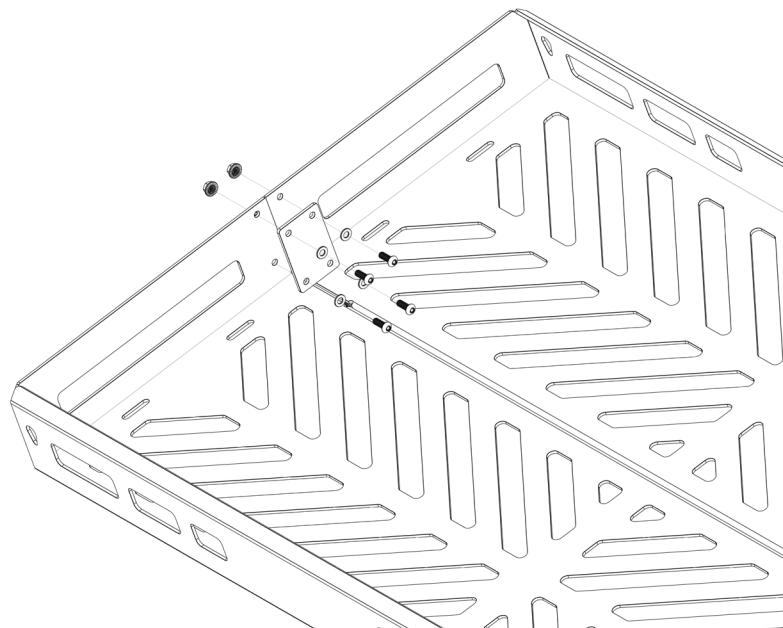

INSTALLATION

- 4** Next, cut the provided trim into 3" strips. Then, using something that will not damage the powder coat on the basket, pry the corners apart just enough to put the trim on edge of the side panel. Do this at each corner.

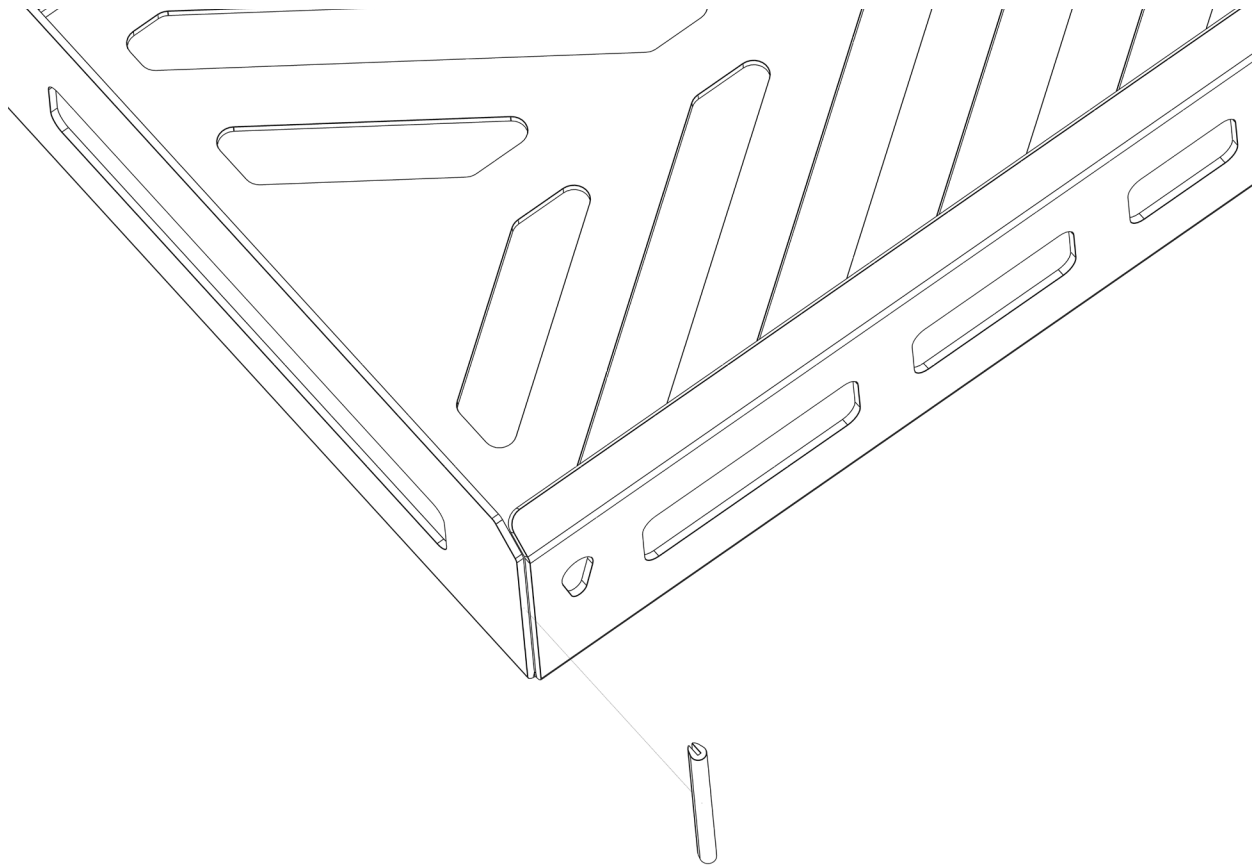

INSTALLATION

- 5** With the basket fully assembled, place it on top of the mounts and loosely bolt it in using four 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts per side. Once it is loosely installed, adjust the position of the basket and brackets until everything is where you want it, then finish by fully tightening everything into place.

