




VICTORY4X4

200 SERIES & LX 570 HATCH MOLLE PANEL

INSTALL INSTRUCTIONS

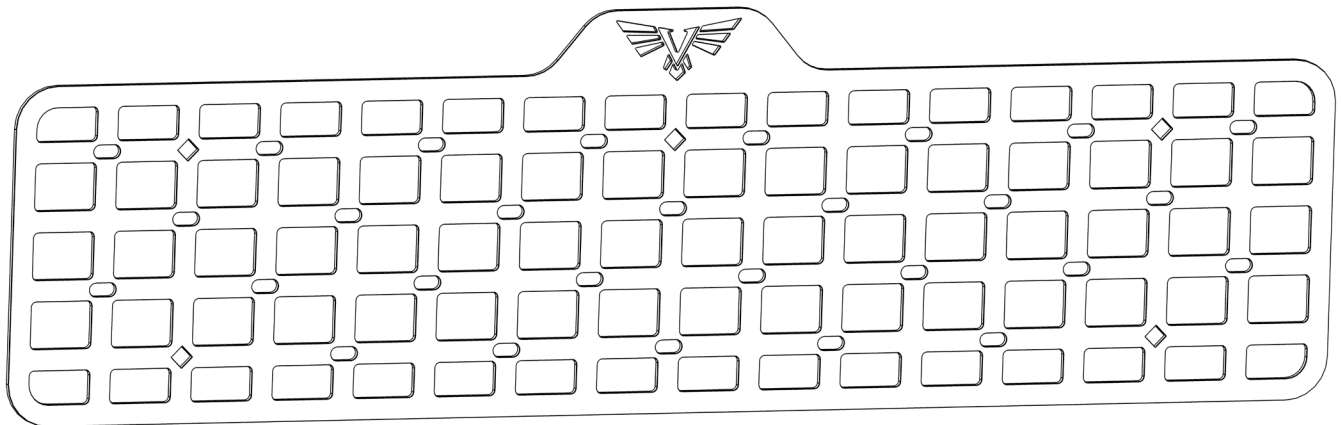


Please read the mounting instructions below carefully before attempting to install.

Be sure to check out the install video on the product page, if available.

Thank you for purchasing from JcrOffroad! Checkout our website, www.victory4x4.com for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-459-8447!


INCLUDED HARDWARE

5x

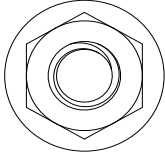


5/16" Flange Nut

5x

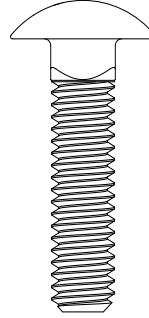

5/16" x 1-1/4" Long
Carriage Bolt


5x

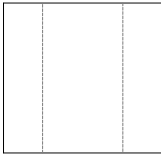

3/4" OD
Aluminium Spacer

INCLUDED PARTS

1x

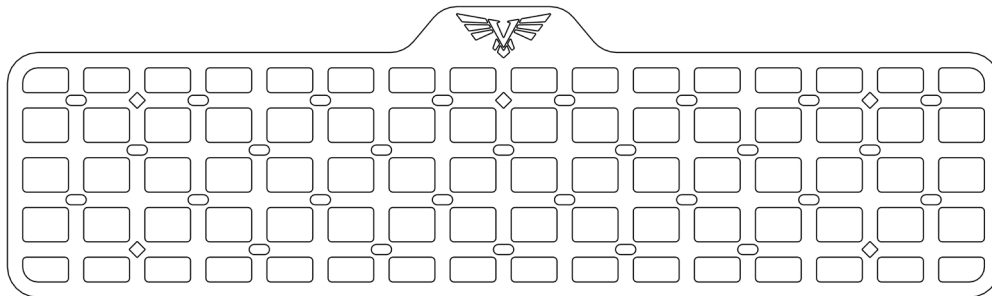

DISASSEMBLY

- 1.** Start by opening the rear hatch and popping off the plastic trim around the top of the hatch. Be sure to start with the top middle piece with the 3rd brake light in it. Once the first piece is removed, be sure to un-hook the light from the plastic. It is easiest to use a plastic pry tool or a flat head screw driver to help pop out the clips.
- 2.** Once the trim pieces are removed, you will need to take the largest of them and modify it. It is easiest to set the piece on a flat surface or a workbench when modifying it.


ASSEMBLY

3. Take the provided molle panel and lay it on top of the trim panel and visually line it up in the middle and so it is centered, as shown below. Once the panel is centered, take a sharp punch or a sharpie and mark the center of the (5) diamond shaped mounting holes on the plastic to drill out.



ASSEMBLY

4. Take a step bit and drill your (5) marked holes out to 5/16" to accommodate the provided carriage bolts.
5. After your holes are drilled, install the (5) provided carriage bolts and aluminum spacers, as shown in the orientation below, and line them up with the drilled holes on top of the plastic. Then thread the (5) provided flange nuts onto the bolts on the back of the plastic. Once all (5) are started, you can then fully tighten them down with a 1/2" socket and wrench.

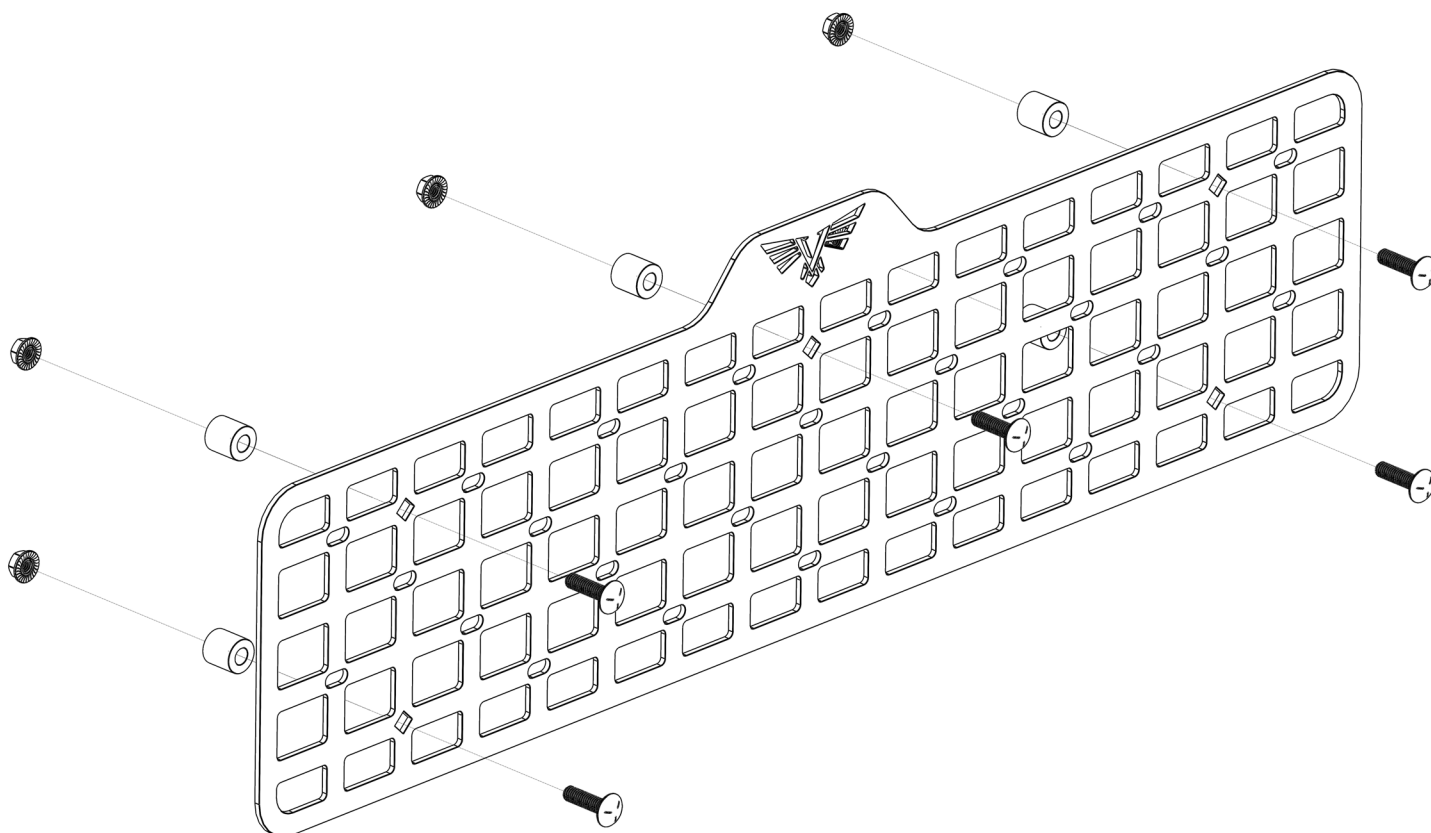

ASSEMBLY

6. Once your panel is secure to your plastic hatch piece, you can then start to re-assemble that back onto your vehicle with the rest of the trim pieces that were removed. Be sure to clip the 3rd brake light back in before clipping the hatch fully back into place.

