




VICTORY 4X4

200 SERIES & LX 570

MONITOR DELETE PANEL

INSTALL INSTRUCTIONS

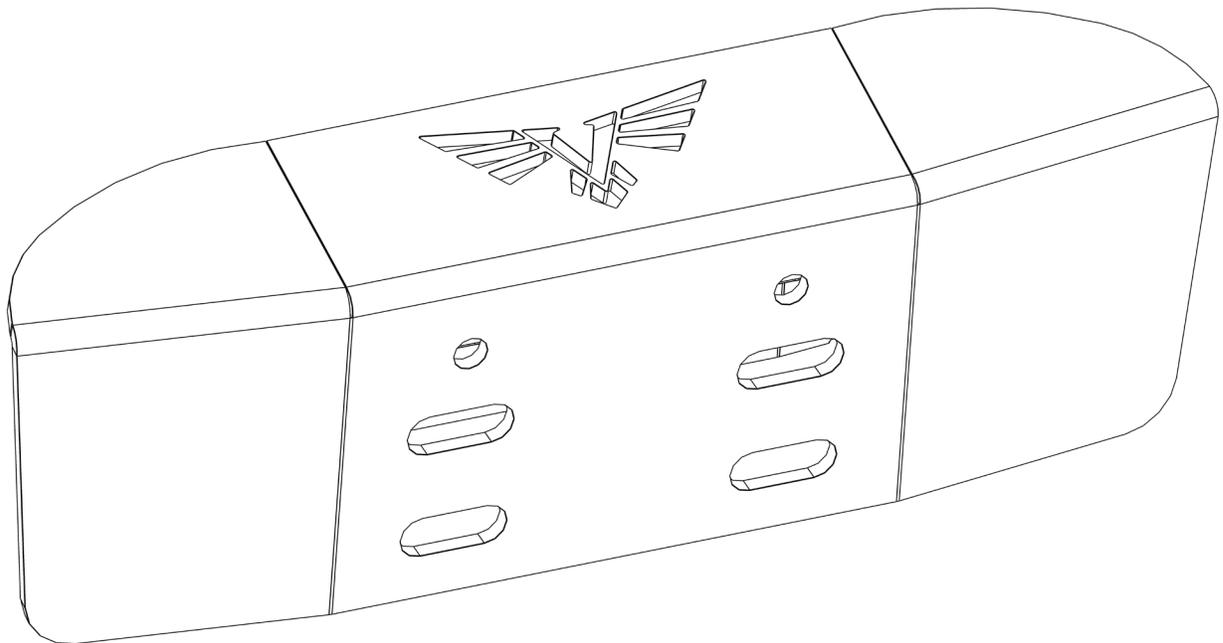


Please read the mounting instructions below carefully before attempting to install.

Be sure to check out the install video on the product page, if available.

Thank you for purchasing from Victory 4x4! Checkout our website, victory4x4.com for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-459-8447!

INCLUDED HARDWARE


4x

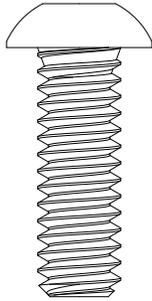


1/4"-20 x 3/4" Long
Stainless Steel Button
Head Screws

INCLUDED PARTS

2x

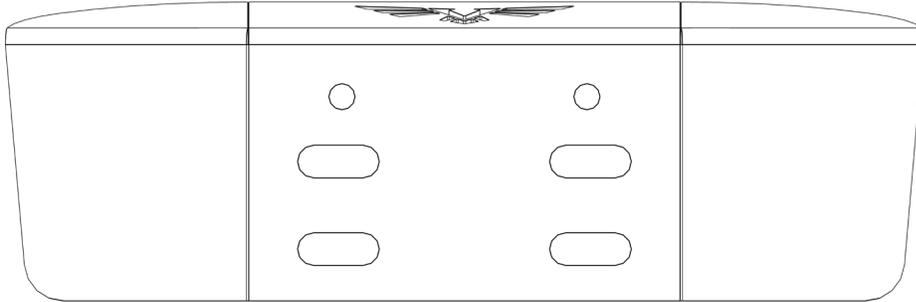

2x

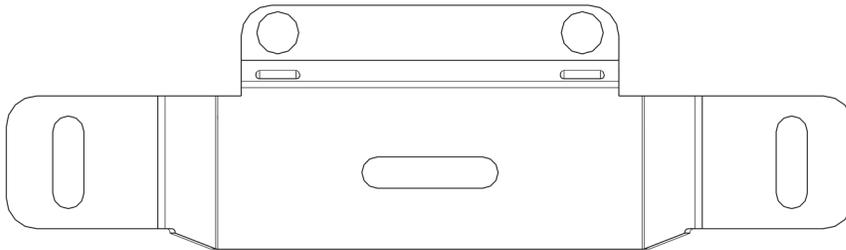


INSTALLATION

1. Start by removing the plastic cover panel behind the monitor, use a plastic pry tool or a flat head screw driver to pop the small bottom piece off, as shown below.



2. Once the plastic piece is popped off, you need to disconnect the (2) wire harnesses that are now exposed. Both should just be thumb tabs that you pinch to pop off. See below for the harness locations.

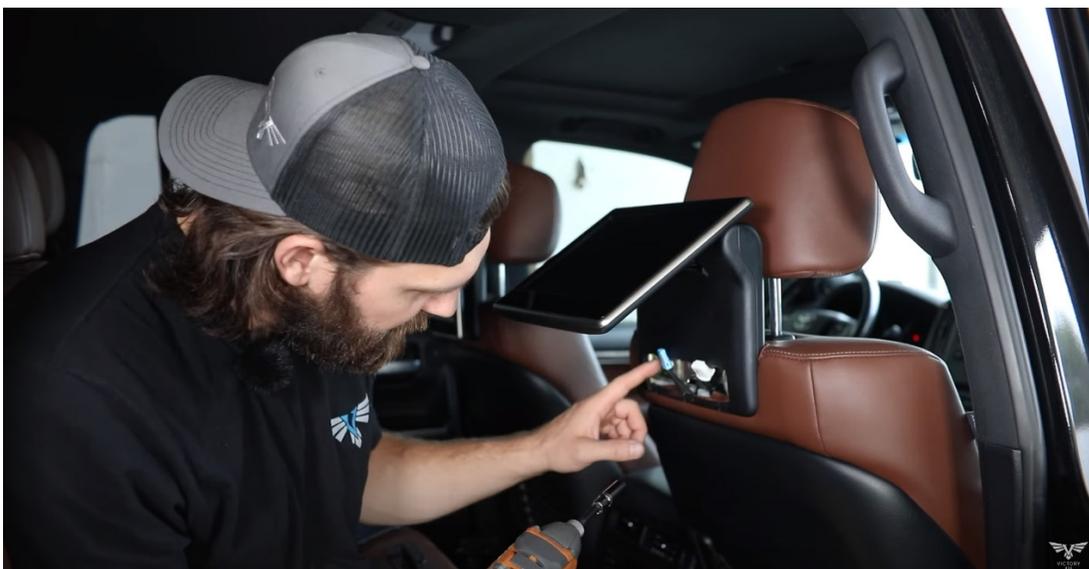

INSTALLATION

- 3.** Now that you have disconnected the wiring, you will need a 10mm socket to remove the (3) factory nuts holding the monitor in place. Be sure to support the monitor when removing the last nut as it is going to want to fall. Once the nuts are removed, you can then pull straight back.



- 4.** Take the provided mounting bracket and slide it on to the (3) mounting studs with the flange pointed up, making sure the bracket is behind the wiring. Once the bracket is in place, take the (3) factory nuts and tighten them down with a 10mm socket, make sure to reinstall the factory ground to the middle stud. Once the bracket is in place, make sure the (2) connectors are out of the way with one on each side of the middle flange, as shown below.

INSTALLATION



5. Once the bracket is secure and the wires are out of the way, take the provided button head bolts and use them to secure the face bracket to the mounting bracket, as shown in the orientation below, to complete your install. Repeat this same process for the opposite side.

