




VICTORY 4X4

3RD GEN TACOMA FRONT DOOR MOLLE PANEL

INSTALL INSTRUCTIONS

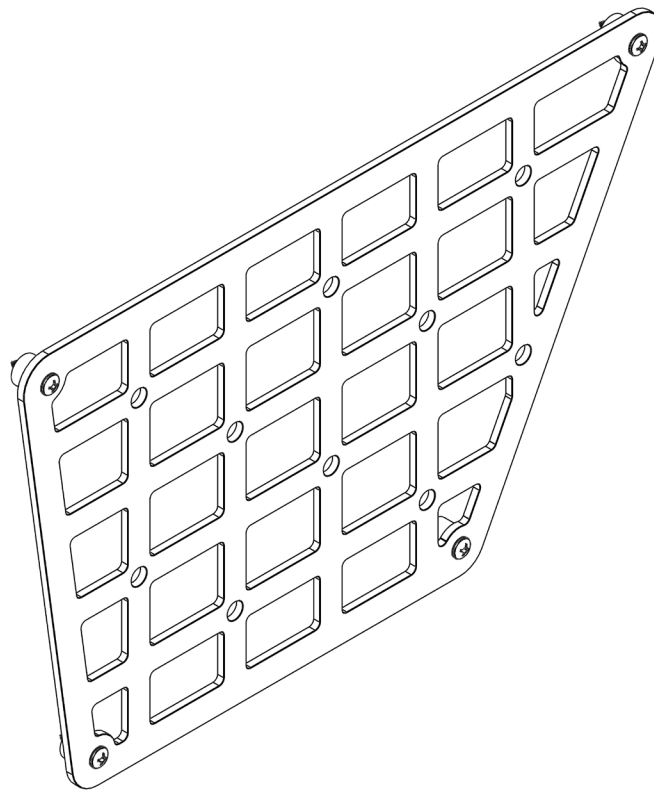


Please read the mounting instructions below carefully before attempting to install.

Be sure to check out the install video on the product page, if available.

Thank you for purchasing from Victory 4x4! Checkout our website, victory4x4.com for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-459-8447!


INCLUDED HARDWARE

8x

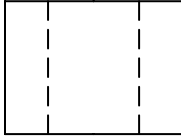

.257" ID X .500" OD X .375"
Nylon Spacer


8x



8-15 X 3/4" PAN PHIL
Button Head

INCLUDED PARTS

2x

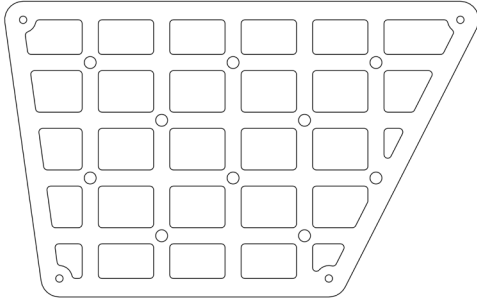

INSTALLATION

- 1** To begin installing the MOLLE Panel, place the panel against the door in the open space under the armrest and behind the cupholder. Then, adjust the position until it is where you want it. We prefer it lined up so there is an even amount of space at the front and back as well as at the top and bottom. Once it is in position, make a mark on the door at each hole. Then, make an indent or small pilot hole at each mark. It only needs to be enough to get the provided screws started.
- 2** With the holes started, set the panel into place and install it using the provided screws with the spacers between the panel and the door.

