




VICTORY 4X4

**2ND & 3RD GEN TUNDRA (07-21) &**

**2ND GEN SEQUOIA (08+)**

# **ARMREST INTERIOR MOLLE PANEL**

INSTALL INSTRUCTIONS

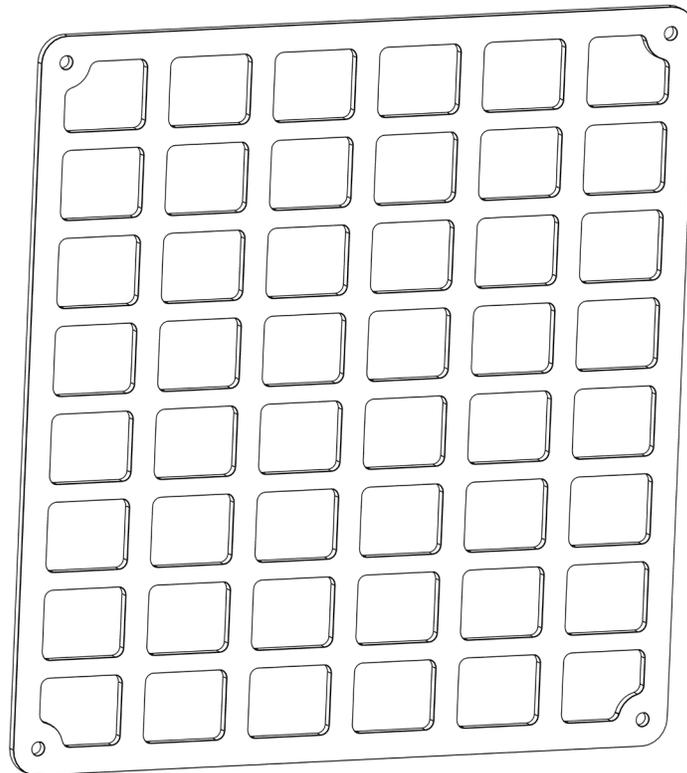


**Please read the mounting instructions below carefully before attempting to install.**

**Be sure to check out the install video on the product page, if available.**

Thank you for purchasing from Victory 4x4! Checkout our website, [victory4x4.com](http://victory4x4.com) for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-459-8447!


# INCLUDED HARDWARE

4x



Black Philips Head  
18-8 Stainless Steel  
3/4" Long Screw


4x

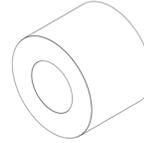

Black Nylon 1/2" OD  
3/8" Long Spacer

# INCLUDED PARTS

1x

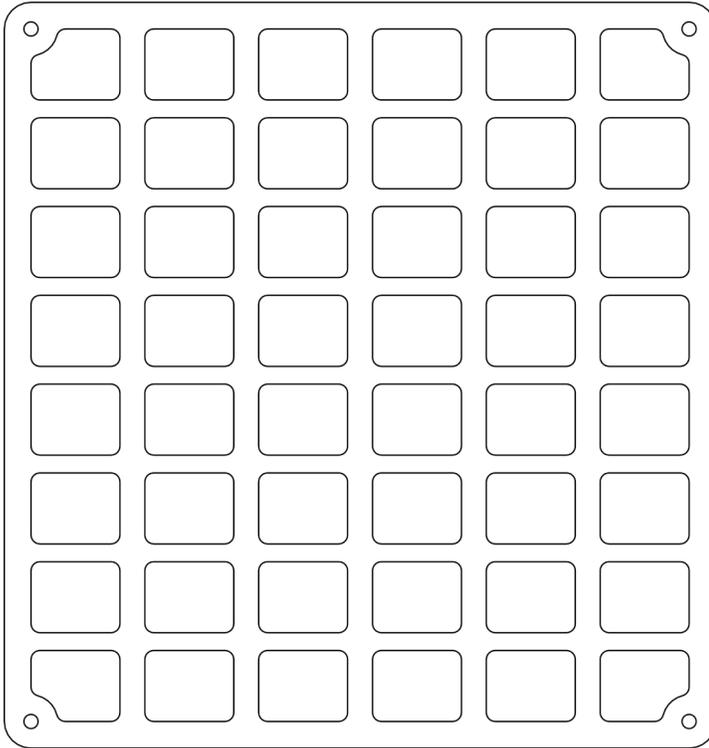

# INSTALLATION

- 1.** Start by lining up the panel up on the interior of your armrest on either the driver or passenger side, and center it visually to your liking, as shown below (passenger side). When the panel is lined up to your liking, then take a punch or a philips head screw driver and apply pressure to mark the four smaller mounting holes in the plastic.



# INSTALLATION

2. Once the pilot holes are marked, you can remove the panel. Take the provided screws and start to thread them into the locations just marked in the plastic. Make sure not to punch too far through the plastic. You can also use a drill with a 1/16" drill bit to start your holes, making sure not to punch through the plastic.
3. After the holes are started, place the panel back in line with the holes and place the provided spacers behind the panel, as shown below. You can then start to thread the screws into the plastic with a screw driver until all four are snug and the panel is secure, be sure not to over tighten.

