



VICTORY
4X4

4RUNNER REAR WINDOW MOLLE PANEL INSTALLATION INSTRUCTIONS

TOOLS NEEDED

- Pry tool
- 5/32" allen
- Phillips screwdriver

HARDWARE

- M6 x 1mm x 55mm Button Head qty. 2
- 1 1/2" White Nylon Spacer qty. 2
- 1/4"-20 x 3/4" Button Head qty. 4
- 1/4-20 Flange Nut qty. 4

Your panel will work on either the drive or passenger side, so install it on whichever side works best for you (or both).

Please read the instructions below carefully before attempting to install.

1. Remove the rear cargo net hook. Rotate to unlock it and pull it straight out. Then remove the screw with your phillips screwdriver.



2. Now loosely install the rear bracket with an M6 Button Head and spacer, like so.



3. Remove the plastic cover over the front mounting location (inside the recessed area for the cargo cover) with a small flathead screwdriver or pry tool. Then remove the screw behind it.



4. Now loosely install the bracket with an M6 Button head and spacer.



5. Pop the cover off of the hanger hook with a pry tool and remove the screw.



6. Put the hanger through the bracket and reinstall using the stock hardware.



7. With all three mounting brackets loosely installed, hang the panel using two 1/4" button head bolts and flange nuts.




8. Now attach the remaining two holes with 1/4" button head bolts and flange nuts. Once it is all loosely bolted together, level the panel and tighten all of the bolts down. Don't forget to clip the cover back on the hanger and pop the cargo net hook into the new bracket.



9. The 4th Gen panel will install in the same way. See bracket locations below.

4TH GEN

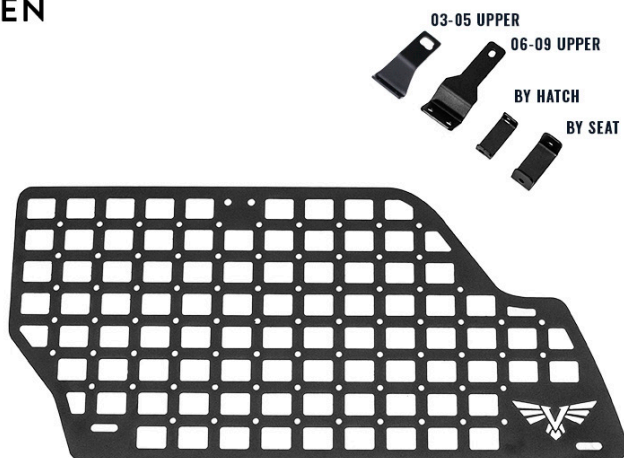

10. That's it! Enjoy all of your new storage options!

