



VICTORY  
4X4

# TUNDRA STRIKE ROCK SLIDER INSTALLATION INSTRUCTIONS

## TOOLS NEEDED

- Pry tool
- Ratchet
- 10mm socket
- 12mm socket
- 12mm wrench

## HARDWARE


- 1/2-13 X 1 1/2" Hex Head qty. 16
- 1/2 Flat Washer qty. 16
- 3/4 Flat Washer qty. 16
- 1/2-13 Flange Nut qty. 16

Please read the instructions below carefully before attempting to install.

1. Remove the factory running board using a 10mm socket. There are 8 bolts along the frame.



2. Remove the 6 bolts holding up the gas tank cover using a 12mm socket. Then remove the plastic cover inside the frame using a 12mm socket.

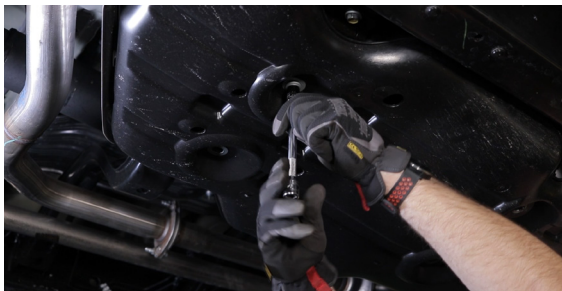

Driver side.

3. Use a pry tool to remove the caps along the frame.



5. Now we will bolt the slider on. Use a jack or have a friend help you hold the slider in place. Take the large washer and stack the medium size washer on top of it followed by a flange nut. This will go on the inside of the frame rail. Use a 1/2" bolt with a washer and thread it into the flange nut on the inside of the frame rail.



Use a 12mm wrench to remove the bolt holding up the brake line. Use the bracket we provide to secure the bolt next to the gas tank that it difficult to reach.



5. Begin drilling with a small bit to open a hole, then use a step bit to open the hole to a 1/2". You will be drilling 3 holes in the frame.







6. Use a 1/2" bolt with a washer and a flange nut to secure the slider to the drilled bolt holes.



7. Go back and tighten the bolts along the frame. Reconnect the brake line along with the gas tank cover and the plastic cover that sits inside the frame.

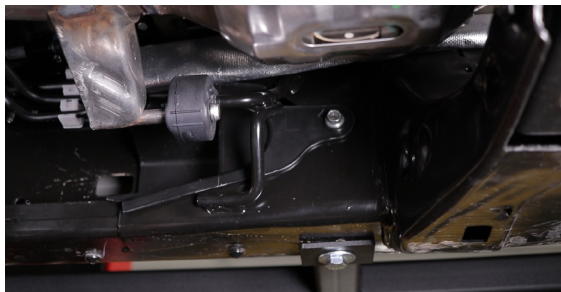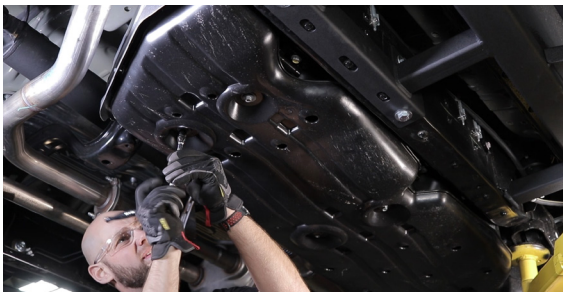

On the passenger side you will repeat the same steps except you will not have to remove the gas tank cover. There will be brake lines in the way but those can easily be moved by popping them out of their clip. Make sure all bolts are tightened down and you are finished with the install.