

TUNDRA DITCH LIGHT INSTALLATION INSTRUCTIONS

TOOLS NEEDED


• 12mm socket

1. Using a 12mm socket, remove the 2 bolts holding the hood in place. After you remove the first bolt, hold the hood in place so it doesnt fall once you remove the second bolt. Put the bracket in place and secure the hinge and bracket to the hood of the truck.





2. Use a 12mm socket to tighten down the bolts. Make sure the hinge is in the same place as it was before we loosened the bolts. Run your wire through the inside hole and secure it with a zip tie.

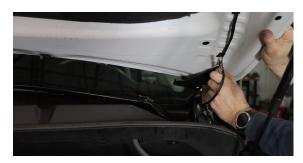



You are now finished with the installation. Enjoy your new ditch light mounts!